

www.blackanddecker.com


GST2000-B1
Garment steamer

English

2

Parts Identification

- 1. Steam head
- 2. Steam head hanger
- 3. Clothes hanger
- 4. Trouser hanger
- 5. Flexible hose
- 6. Telescopic poles
- 7. Pole lock clamps
- 8. Pole extension clamps
- 9. Wheels
- 10. Cord rewind button
- 11. Power button (steam adjust)
- 12. Lamp
- 13. Tank
- 14. Water level window
- 15. Hose connector
- 16. Pleat maker
- 17. Lint pad
- 18. Brush
- 19. Ironing support
- 20. Heat resistant glove
- 21. Shaper accessory for steaming collars

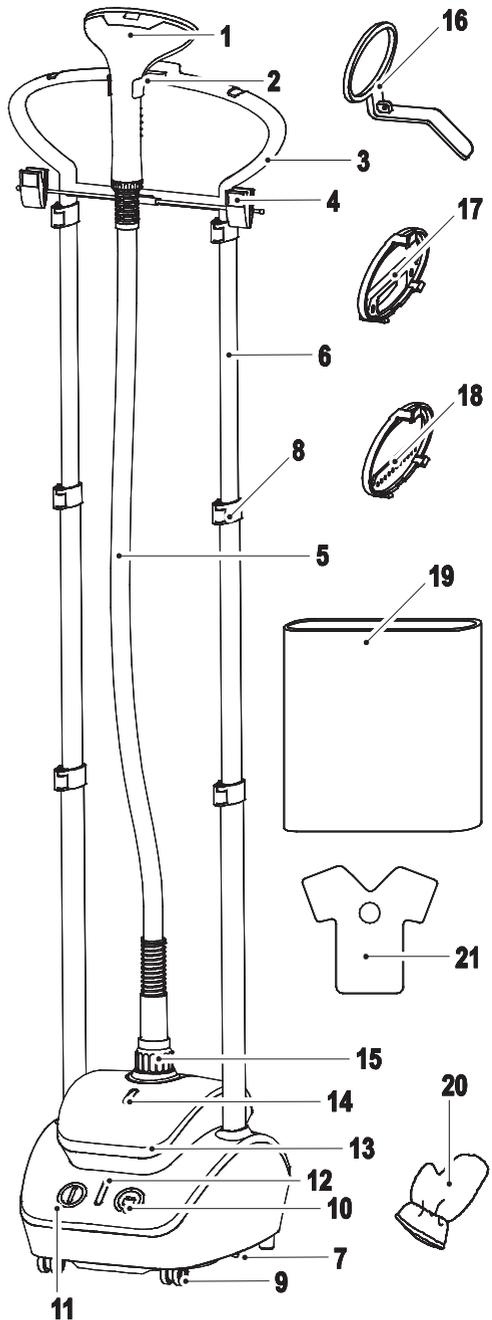

Intended use

Your BLACK+DECKER appliance is intended for steaming fabrics.

Do not use this appliance for any other purpose. This appliance is intended for use in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.



Read this entire manual carefully before using the appliance.

Safety instructions

Warning! When using mains-powered appliances, basic safety precautions, including the following, should always be followed to reduce the risk of fire, electric shock and personal injury.

- The intended use is described in this manual. The use of any accessory or attachment or the performance of any operation with this appliance other than those recommended in this instruction manual may present a risk of personal injury.
- Retain this manual for future reference.
- Do not use the appliance outdoors.
- Always protect the motor unit from water or excessive humidity.
- If the power supply cord is damaged during use, disconnect the appliance from the power supply immediately. Do not touch the power supply cord before disconnecting from the power supply.
- Disconnect the appliance from the power supply when not in use, before fitting or removing parts and before cleaning.
- Never let the appliance operate unattended.
- Do not let the cord hang over the edge of a table, counter, or touch hot surfaces.
- Fully uncoil then guide the power supply cord neatly so it cannot be caught accidentally, tripped over or cause any other hazard.
- The appliance must not be located immediately below a socket-outlet.
- To prevent overload and blown fuses, do not plug other appliance into same outlet (receptacle)
- Don't touch the hot surfaces.
- Always ensure that hands are dry before operating or adjusting any switch on the product or touching the plug and mains supply connections.
- Do not use this appliance with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

Using your appliance

- Always take care when using the appliance.
- Never pull the power supply cord to disconnect the plug from the socket. Keep the power supply cord away from heat, oil and sharp edges.
- Do not place the appliance on or near heat sources or in a heated oven.

ENGLISH

- Do not store away until the appliance cools down, store the appliance in cool dry location when not in use.
- Always operate on a flat horizontal surface.
- Do not insert or allow foreign objects to enter any ventilation, exhaust opening or hose, as this may cause an electric shock, fire or damage to the appliance.
- To disconnect the appliance, switch it "OFF", then remove the plug from outlet. Do not pull out the cord because this could damage it.
- The temperature of accessible surfaces may be high during use and for some time afterwards.
- To reduce the risk of electric shock, do not immerse the appliance in water or other liquids.
- Do not allow cord to touch hot surfaces. Let appliance cool completely before storing away. Loop cord loosely around appliance when storing.
- Do not direct steam at people or animals, or use steamer on garments while they are being worn.
- Always disconnect appliance from electrical outlet when filling with water, emptying, cleaning or when not in use.
- Do not operate appliance with a damaged cord, or if the appliance has been dropped or damaged. To reduce the risk of electrical shock, do not disassemble or attempt to repair the appliance, take it to a qualified service person for examination and repair. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used.
- Close supervision is required for any appliance used by or near children. Do not leave the appliance unattended while connected.
- Always switch the appliance off and disconnect from the mains before leaving the unit for any amount of time.
- Burns could occur from touching hot metal parts, hot water or steam. Use care when you empty a steam appliance, there may be hot water in the tank or inside the appliance.
- Fill water in water tank only and remove the water tank only when it is empty.
- Never drop or insert any object into any opening or hose.
- Always keep the hose and nozzle elevated above the water tank.
- Steam only in an up and down vertical motion. Never use steamer in a horizontal position or tilt into a backward position, this may result in hot water discharge.
- Do not place the steam nozzle directly on any surface or the appliance power cord while it is hot or plugged in. Use the stand provided.
- Use caution when changing attachments, as they may contain hot water from condensation. Ensure the attachments are cooled off to avoid contact with hot water.
- The use of accessory attachments other than those provided by Black & Decker is not recommended and may result in fire, electric shock or personal injury.
- This unit is for indoor use only.
- Do not cut or attempt to extend the steaming hose.

- To prevent the appliance over heating, when you hang clothes on garment hook for removing wrinkle, please assemble all attached garment telescopic rod and extend it at highest position.
- Do not put perfume, vinegar, starch, descaling agents, ironing aids or other chemicals or additives in the water tank.

Safety of others

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not allow children or any person unfamiliar with these instructions to use the appliance.
- Do not allow children or animals to come near the work area or to touch the appliance or power supply cord.
- Close supervision is necessary when the appliance is used near children.

After use

- Remove the plug from the socket before leaving the appliance unattended and before changing, cleaning or inspecting any parts of the appliance.
- When not in use, the appliance should be stored in a dry place.
- Always empty all water from the appliance before storage.
- Children should not have access to stored appliances.

Inspection and repairs

- Switch off the appliance before cleaning, changing accessories or fitting and removing the water tank.
- Before use, check the appliance for damaged or defective parts. Check for breakage of parts, damage to switches and any other conditions that may affect its operation.
- Do not use the appliance if any part is damaged or defective.
- Have any damaged or defective parts repaired or replaced by an authorised repair agent.
- Before use, check the power supply cord for signs of damage, ageing and wear.
- Do not use the appliance if the power supply cord or mains plug is damaged or defective.
- If the power supply cord or mains plug is damaged or defective it must be repaired by an authorised repair agent in order to avoid a hazard. Do not cut the power supply cord and do not attempt to repair it yourself.
- Never attempt to remove or replace any parts other than those specified in this manual.



Caution: Danger of scalding.



Surfaces may become hot during use and during the cool down period.

Electrical safety



Warning! This product must be earthed. Always check that the power supply corresponds to the voltage on the rating plate.

ENGLISH

- Power plugs must match the outlet. Never modify the plug in any way. Unmodified plugs and matching outlets will reduce risk of electric shock.
- The use of extension cables is not recommended with this unit.

Mains plug replacement

If a new mains plug needs to be fitted:

- Safely dispose of the old plug
- Connect the brown lead to the live terminal of the new plug
- Connect the blue lead to the neutral terminal
- If the product is class I (earthed), connect the green/yellow lead to the earth terminal


Warning! If your product is class II double insulated (only 2 wires in the cord set), no connection is to be made to the earth terminal

- Follow the fitting instructions supplied with good quality plugs
- Any replacement fuse must be of the same rating as the original fuse supplied with the product.


Assembly:

Warning! The appliance must be disconnected from the mains before any assembly, cleaning or maintenance.


1. Insert the telescopic poles into the top of the unit. Turn the polelocking clamps to the lock position at the bottom of the appliance.

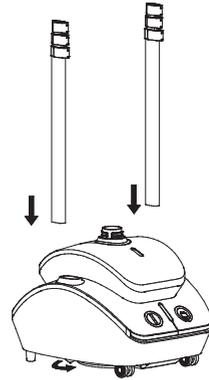


2. To attach the clothes hanger, open the top pole extension clamp on each pole. Align the tabs in clothes hanger with the grooves on telescopic poles and push down firmly. When the clothes hanger is in place close the pole extension clamps.

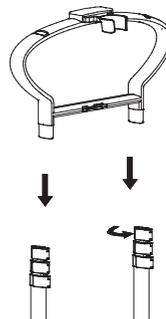


3. Open the bottom 2 pole extension clamps on each of the telescopic poles and pull the telescopic poles upwards to fully extend the poles. When fully extended close the pole extension clamps. Make sure that the telescopic pole is securely locked into place and can not be pushed downward.

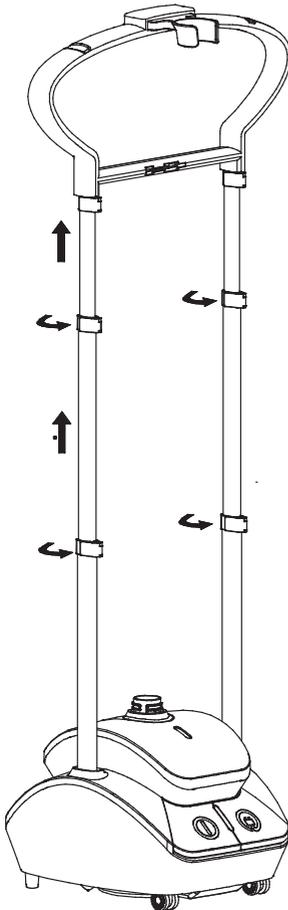


4. Insert the trouser hanger into the slots in the clothes hanger and lock into place by sliding it to the right.

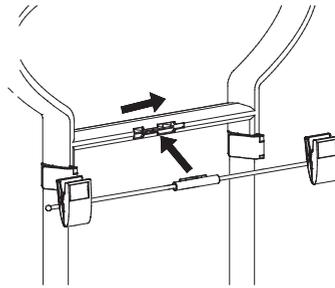

5. Place the hose coupling over the steam outlet on the unit. Push it down firmly and rotate it clockwise to lock it in place.

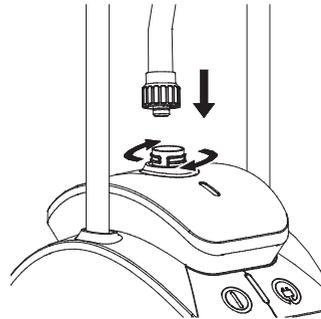


6. Place the steam head onto the steam head support on the clothes hanger.

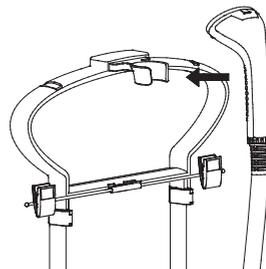


Note: Do not place the steam head into the support clip until after the flexible hose has been connected to the base to prevent the flexible hose from falling.

Accessories

1. The Lint pad (17) and Brush (18) can be fitted by simply clipping them on steam head.

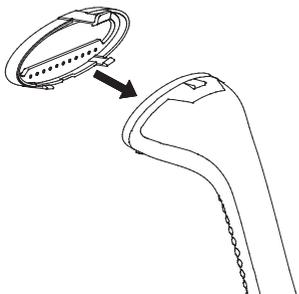

2. The pleat maker (16) can be fitted by sliding the pivoting clip on the pleat maker into the receptacle on the steam head.

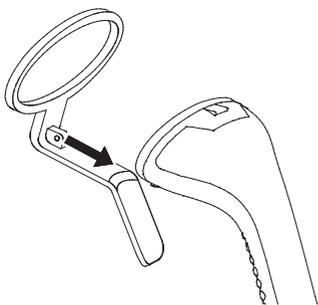


3. The ironing support (19) can be fitted by removing the clothes hanger and sliding the ironing support over the top portion of the telescopic poles then refitting the clothes hanger.
4. The Shaper accessory for steaming collars (21) can be used to support the collar of a garment whilst steaming.

Use

Warning: Whenever using this appliance, always wear the heat resistant glove (20) on the hand that is not holding the steam head.

1. Lift the water tank from the unit.

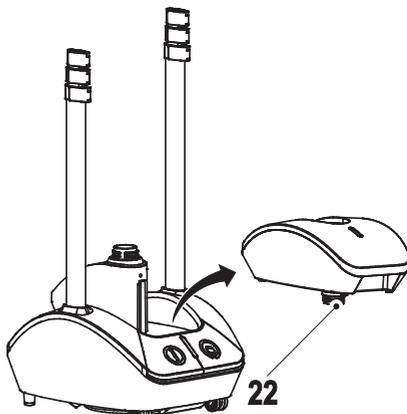

2. Turn the tank upside down then remove the filler cap (22) by turning it anti-clockwise.
3. Hold the tank under cold running water and fill to the desired level.

Note: Only fill the water tank with cold water, DO NOT use hot water, DO NOT add perfume, vinegar starch, descaling agents, ironing aids or other chemicals to avoid damage to your steamer.

4. When you have finished filling the tank screw the filler cap back on by turning it clockwise.
5. Place water tank back into unit and make sure it is securely seated in the cavity.
6. Plug the steamer cord into the electrical outlet. (A beep will be heard)

7. Press the power switch. (Steam will emit in 40-45 seconds)



Note: The amount of steam can be adjusted, there are 3 different settings for steam which can be set by pressing the on button the required number of times:

NOTE:


- If the water level window shows green, it means the tank has enough water.
- If the water level window shows red, it means the tank has little water and you need to refill the water tank.
- If the lamp (12) starts flashing and an intermittent beep is heard, there is no water in the appliance. Switch the appliance off and remove the plug from the mains. Refill the water tank.

Warning! After use and whenever you leave the appliance for any amount of time, turn the appliance off and remove the plug from the mains.

Note: After use, turn the appliance off and remove the plug from the mains then empty the water from the appliance, do not leave water in the appliance whilst it is being stored.

Using the pleat maker

1. Fit the pleat maker.
2. Open the pleat maker by pulling the handle towards the steam head.
3. Place the material between the pleat maker and the steam head then release the handle.
4. Move the steam head slowly along the pleat in a downwards direction.

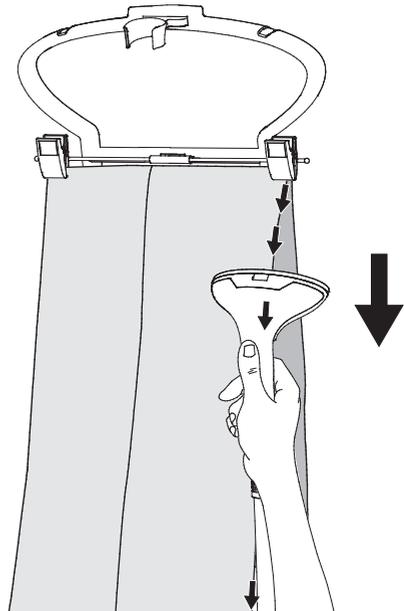

Maintenance & cleaning

- Switch the appliance off, remove the plug from the power socket and allow to cool fully.
- The appliance is easier to clean if you do so immediately after use.
- Do not use abrasive cleaning agents, scourers, acetone, alcohol etc. to clean the appliance.
- Clean the appliance with a damp cloth.

Never immerse the motor unit in water nor rinse it under the tap.

Technical data

GST2000-B1	
Voltage	220-240 V
Frequency	50/60 Hz
Power consumption	1800W
Tank capacity	2.4 L
Net weight	5.9 Kg

Protecting the environment



Separate collection. This product must not be disposed of with normal household waste.

Should you find one day that your Black & Decker product needs replacement, or if it is of no further use to you, do not dispose of it with other household waste. Make this product available for separate collection.

- Black & Decker provides a facility for recycling Black & Decker products once they have reached the end of their working life. This service is provided free of charge. To take advantage of this service please return your product to any authorised repair agent who will collect them on our behalf.
- You can check the location of your nearest authorised repair agent by contacting your local Black & Decker office at the address indicated in this manual. Alternatively, a list of authorized Black & Decker repair agents and full details of our after-sales service and contact are available on the Internet at: www.2helpU.com.

Service Information

BLACK+DECKER offers a full network of company-owned and authorized service locations throughout Asia. All BLACK+DECKER Service Centers are staffed with trained personnel to provide customers with efficient and reliable power tool service. Whether you need technical advice, repair, or genuine factory replacement parts, contact the BLACK+DECKER location nearest to you.

Notes

- BLACK+DECKER's policy is one of continuous improvement to our products and, as such, we reserve the right to change product specifications without prior notice.
- Standard equipment and accessories may vary by country.
- Product specifications may differ by country.
- Complete product range may not be available in all countries.
- Contact your local BLACK+DECKER dealers for range availability.

