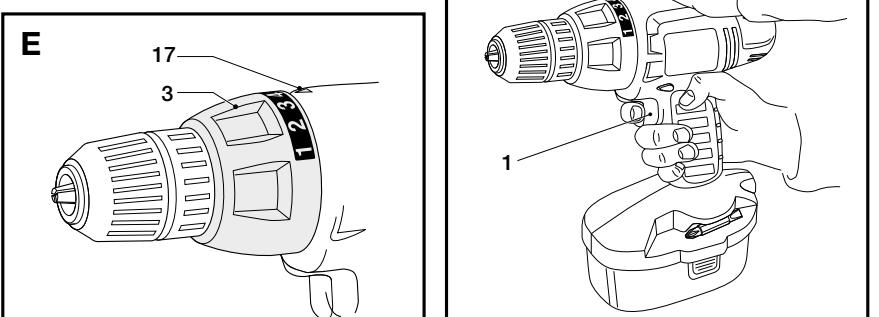
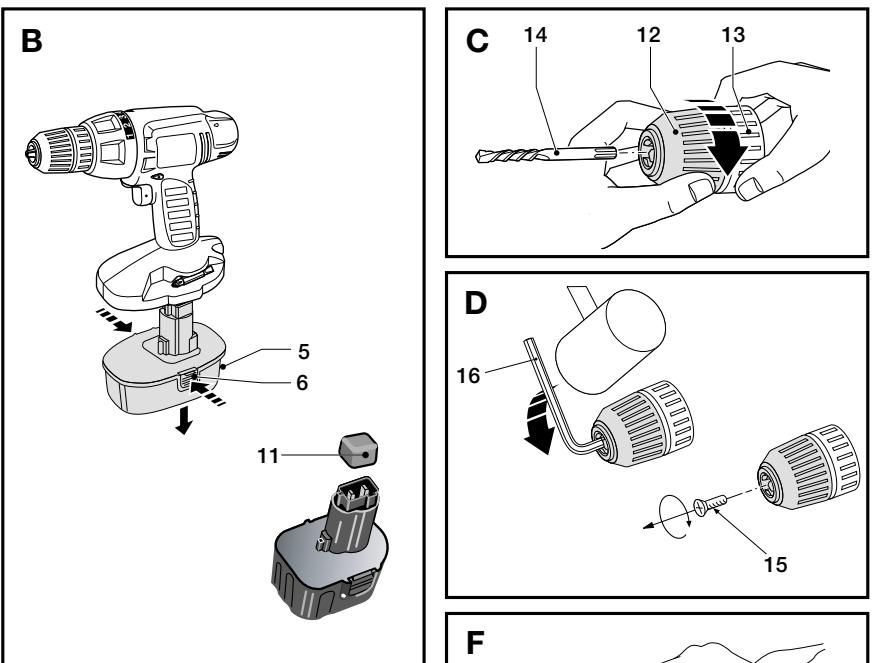
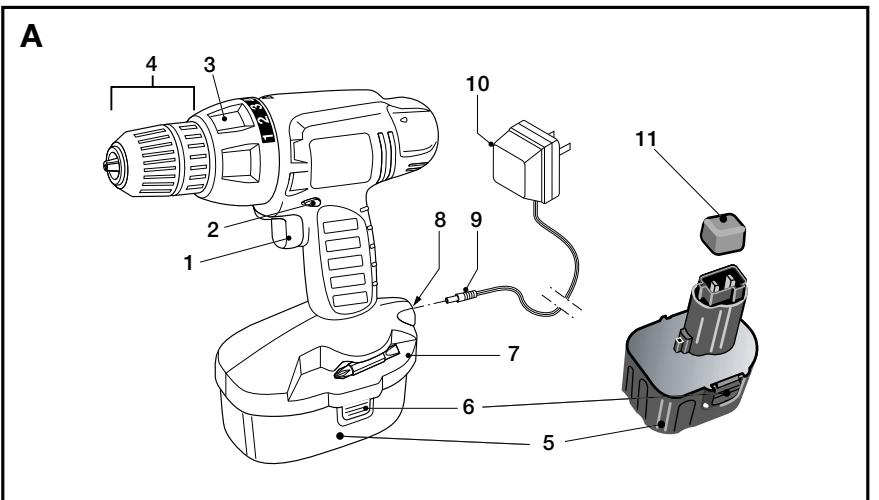

HM1200
www.blackanddecker.com

This manual is applicable for -B1& -KR only

Black & Decker Copyright 2007 (Oct-2007)

90528170



12V 10mm Dual Speed Cordless Drill/Driver HM1200

Technical Data

Cordless Drill/ Driver	HM1200
Voltage	V 12
No Load Speed	RPM 350/700
Max. Torque	Nm 9
Drilling Capacity - Wood / Steel	mm 13/10
Chuck Capacity	mm 1.0-10
Weight	g 900
Battery	
Voltage	V 12
Capacity	Ah 1.2
Weight	g 480
Charger	
Approx. Charging Time	Hour 6
Weight	g 170

Intended Use

Your Black & Decker drill / screwdriver has been designed for screwdriving applications and for drilling wood, metal and plastics. This tool is intended for consumer use only. Your Black & Decker charger has been designed for charging Black & Decker batteries of the type supplied with this tool.

Safety Instructions

When using power tools, always observe the safety regulations applicable in your country to reduce the risk of fire, electric shock, personal injury and material damage. Read the following safety instructions before attempting to operate this product. Keep these instructions in a safe place!

The following symbols are used throughout this manual:

- △ Denotes risk of personal injury, loss of life or damage to the tool in case of non-observance of the instructions in this manual.
- △ Denotes risk of electric shock.
- △ Fire hazard.

1. **Keep work area clean.** Cluttered areas and benches can cause accidents.

2. **Consider work area environment.** Do not expose power tool to humidity. Keep work area well lit (250-300 Lux). Do not use Power Tools in the presence of inflammable liquids or gases.

3. **Keep children away.** Do not let children come into contact with the tool or extension cord. Keep all people away from the work area.

4. **Dress properly.** Do not wear loose clothing or jewelry. They can be caught in moving parts. Preferably wear rubber gloves and non-slip footwear when working outdoors. Wear protective hair covering to keep long hair out of the way. When working outdoors, preferably wear suitable gloves and non-slip footwear.

5. **Personal protection.** Always use safety glasses. Everyday eyeglasses only have impact resistant lenses, they are not safety glasses. Use a face or dust mask if the operation may produce dust or flying particles. If these particles might be considerably hot, also wear a heat resistant apron. Wear ear protection whenever the sound level seems uncomfortable, i.e. if the sound pressure stated in this manual exceeds 85 dB(A).

6. **Do not overreach.** Keep proper footing and balance at all times.

7. **Stay alert.** Watch what you are doing. Use common sense. Do not operate the tool when you are tired.

8. **Secure workpiece.** Use clamps or a vice to hold the workpiece. It is safer and it frees both hands to operate the tool.

9. **Connecting dust extraction equipment.** If devices are provided for the connection of dust extraction and collection ensure these are connected and properly used, especially in confined areas.

10. **Remove adjusting keys and wrenches.** Always check that adjusting keys and wrenches are removed from the tool before switching on.

11. **Use appropriate tool.** The intended use is laid down in the instruction manual. Do not force small tools or attempt to do the job of a heavy-duty tool. The tool will do the job better and safer at the rate for which it was intended. Do not force the tool.

12. **Warning!** The use of any accessory or attachment or performance of any operation with this tool, other than those recommended in this instruction manual may present a risk of personal injury.

13. **Check for damaged parts.** Before using the tool, carefully inspect the tool to ensure that it will operate properly and perform its intended function. Check for misalignment and seizure of moving parts, breakage of parts and any other conditions that may affect its operation. Have damaged guards or other defective parts repaired or replaced as instructed. Do not use the tool if the switch is defective. Have any damaged or defective parts replaced by an authorized repair agent. Never attempt any repairs yourself.

14. **Remove the battery.** Where the design permits, remove the battery when the tool is not in use. Always check that the power supply corresponds to the voltage on the rating plate.

15. **Do not abuse cord.** Never carry the charger by its cord or yank it to disconnect from the socket. Keep the cord away from heat, oil and sharp edges.

16. **Store idle tools.** When not in use, power tools must be stored in a dry place and locked up securely, out of reach of children.

17. **Maintain tools with care.** Keep the tools in good condition and clean for better and safer performance. Follow the instructions for maintenance and changing accessories. Inspect the tool cords at regular intervals and, if damaged, have them repaired by an authorized repair agent. Inspect the extension cords periodically and replace them if damaged. Keep all controls dry, clean and free from oil and grease.

18. **Have your tool repaired by an authorized repair agent.** This Power Tool is in accordance with the relevant safety regulations. To avoid danger, electric appliances must only be repaired by qualified technicians using original spare parts.

Additional Safety Instructions for Batteries and Chargers

Batteries

19. Never attempt to open for any reason.
20. Do not expose the battery to water.
21. Do not store in locations where the temperature may exceed 40°C.
22. Charge only at ambient temperatures between 4°C and 40°C.

23. Charge only using the charger provided with the tool.

24. When disposing of batteries, follow the instructions given in the section "Protecting the environment".

25. △ **Leaks from battery cells can occur under extreme conditions.** The battery fluid, a 25-30% solution of potassium hydroxide, can be harmful. In case of skin contact: (a) wash quickly with soap and water; or (b) neutralize with a mild acid such as lemon juice or vinegar. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes. Seek medical attention.

26. △ **Fire hazard!** Avoid short-circulating the contacts of a detached battery (e.g. when storing the battery in a toolbox).

27. △ **Do not incinerate the battery.**

28. △ **Do not attempt to charge damaged batteries.**

Chargers

29. Use your Black & Decker charger only to charge the battery in the tool with which it was supplied. Other batteries could burst, causing personal injury and damage.

30. Never attempt to charge non-rechargeable batteries.

31. Have defective cords replaced immediately.

32. Do not expose to water.

33. Do not open the charger.

34. Do not probe the charger.

35. The charger is intended for indoor use only.

Specific Safety Rules

36. Hold tool by insulated gripping surfaces when performing an operation where the cutting tool may contact hidden wiring or its own cord. Contact with a live wire will also make exposed metal parts of the tool "live" and shock the operator.

37. **When working on a ladder or on scaffolding be sure to lay the tool down on its side when not in use.** Some tools with large battery packs will stand upright but may be easily knocked over.

38. Avoid touching the tip of a drill bit just after drilling, as it may be hot.

39. When fitting and changing accessories, always use the instructions supplied with the accessory.

40. Should your tool develop a fault, do not try to fix it yourself, but take it to one of our authorized repair agents.

41. △ **Warning:** Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contain chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints,
- Crystalline silica from bricks and cement and other masonry products, and
- Arsenic and chromium from chemically-treated lumber (CCA).

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

Avoid prolonged contact with dust from power sanding, sawing, grinding, drilling, and other construction activities. Wear protective clothing and wash exposed areas with soap and water. Allowing dust to get into your mouth, eyes, or lay on the skin may promote absorption of harmful chemicals.

42. **Do not overreach.** Keep proper footing and balance at all times.

43. **Stay alert.** Watch what you are doing. Use common sense. Do not operate the tool when you are tired.

44. **Secure workpiece.** Use clamps or a vice to hold the workpiece. It is safer and it frees both hands to operate the tool.

45. **Connecting dust extraction equipment.** If devices are provided for the connection of dust extraction and collection ensure these are connected and properly used, especially in confined areas.

46. **Remove adjusting keys and wrenches.** Always check that adjusting keys and wrenches are removed from the tool before switching on.

47. **Use appropriate tool.** The intended use is laid down in the instruction manual. Do not force small tools or attempt to do the job of a heavy-duty tool. The tool will do the job better and safer at the rate for which it was intended. Do not force the tool.

48. **Warning!** The use of any accessory or attachment or performance of any operation with this tool, other than those recommended in this instruction manual may present a risk of personal injury.

49. **Check for damaged parts.** Before using the tool, carefully inspect the tool to ensure that it will operate properly and perform its intended function. Check for misalignment and seizure of moving parts, breakage of parts and any other conditions that may affect its operation. Have damaged guards or other defective parts repaired or replaced as instructed. Do not use the tool if the switch is defective. Have any damaged or defective parts replaced by an authorized repair agent. Never attempt any repairs yourself.

50. **Remove the battery.** Where the design permits, remove the battery when the tool is not in use. Always check that the power supply corresponds to the voltage on the rating plate.

51. **Do not abuse cord.** Never carry the charger by its cord or yank it to disconnect from the socket. Keep the cord away from heat, oil and sharp edges.

52. **Store idle tools.** When not in use, power tools must be stored in a dry place and locked up securely, out of reach of children.

53. **Maintain tools with care.** Keep the tools in good condition and clean for better and safer performance. Follow the instructions for maintenance and changing accessories. Inspect the tool cords at regular intervals and, if damaged, have them repaired by an authorized repair agent.

54. **Have your tool repaired by an authorized repair agent.** This Power Tool is in accordance with the relevant safety regulations. To avoid danger, electric appliances must only be repaired by qualified technicians using original spare parts.

Features (fig. A)

1. Two-speed on / off switch
2. Forward / reverse slider
3. Mode selector/ torque adjustment collar
4. Chuck
5. Battery
6. Battery release button
7. Bit holder
8. Charger connector
9. Charger plug
10. Charger
11. Battery Cap

Using an Extension Cable

An extension cable should not be used unless absolutely necessary. Use of an improper extension cable could result in a risk of fire and electric shock. If an extension cable must be used, use only those that are approved by the country's Electrical Authority.

16. **Do not abuse cord.** Never carry the charger by its cord or yank it to disconnect from the socket. Keep the cord away from heat, oil and sharp edges.

17. **Store idle tools.** When not in use, power tools must be stored in a dry place and locked up securely, out of reach of children.

18. **Maintain tools with care.** Keep the tools in good condition and clean for better and safer performance. Follow the instructions for maintenance and changing accessories. Inspect the tool cords at regular intervals and, if damaged, have them repaired by an authorized repair agent.

19. **Have your tool repaired by an authorized repair agent.** This Power Tool is in accordance with the relevant safety regulations. To avoid danger, electric appliances must only be repaired by qualified technicians using original spare parts.

Additional Safety Instructions for Batteries and Chargers

Batteries

19. Never attempt to open for any reason.

20. Do not expose the battery to water.

21. Do not store in locations where the temperature may exceed 40°C.

22. Charge only at ambient temperatures between 4°C and 40°C.

push until the battery snaps into place.

• To remove the battery, push the two release buttons (6) simultaneously and at the same time pulling the battery out of the receptacle.

Battery storage and carrying case (11) is provided for use whenever the battery is out of the tool or charger. Remove case before placing battery in charger or tool.

• **WARNING!** Do not store or carry battery so that metal objects can contact exposed battery terminals. For example, do not place battery in aprons, pockets, toolboxes, product kit boxes, drawers, etc. with loose nails, screws, keys, etc. without battery cap. Without cap in place, battery could short circuit causing fire or burns or damage to battery.

• **Fitting and Removing a Drill Bit or Screwdriver Bit (Fig. C)**

N.B. Accessories mentioned in this manual may not necessarily be included in your pack.

The tool is equipped with a keyless chuck to allow for easy exchange of bits.

• **Warning:** First remove the battery from the tool.

• Lock the tool by setting the forward/ reverse slide (2) to the center position (fig. A).

• Open the chuck (4) by turning the front part (12) with one hand while holding the rear part (13) with the other.

• Insert the bit shank (14) into the chuck.

• Use spade bits when drilling large diameter holes in wood.

• Use HSS drill bits when drilling in metal.

• Use a lubricant when drilling metals other than cast iron and brass.

• Make an indentation using a center punch at the center of the hole to be drilled in order to improve accuracy.

• Keep the motor running while pulling the bit out of a drilled hole. This will help reduce jamming.

• When using twist drill bits to drill holes in wood, it will be necessary to pull the bits out frequently to clear chips from the flutes.

• **Fitting and Removing a Drill Bit or Screwdriver Bit (Fig. B)**

Keselamatan Listrik

Kotak ini didesain hanya untuk tingkat voltase tertentu saja. Anda harus selalu mengecek suplai tenaga listrik sesuai dengan voltase yang dicantumkan pada alat pada pelat data-data.

Peringatan! Jangan sambungkan kabel kawat hidup (L) atau neutral (N) ke perjepit arde yang bertanda (E) Kabel Perpanjangan

Kabel perpanjangan tidak boleh digunakan kecuali jika mutlak perlu. Penggunaan kabel perpanjangan yang tidak

sesuai dapat mengakibatkan risiko kebakaran atau keruangan.

Jika kabel perpanjangan harus digunakan, pastikan bahwa kabel perpanjangan dalam dalam kondisi baik sebelum digunakan. Selalu gunakan kabel yang sesuai untuk input daya charger anda (lihat data teknis pada plakat nama).

Selalu menggunakan gunungan kabel, selalu lepaskan kabel secara keseluruhan.

Penjelasan (Fig. A)

- 1) Dua speed saklar on/off
- 2) Penggeser maju/mundur
- 3) Ring untuk menyetel momen putar
- 4) Cekaman mata bor yang dikunci dan dibuka dengan tangan
- 5) Aki
- 6) Gagang pelepas untuk bateri
- 7) Tempat menyimpan bit/mata obeng
- 8) Penyambung untuk charger
- 9) Adapter
- 10) Charger
- 11) Putaran bateri

Perakitan dan Penyetelan

Selalu perakitan dan penyetelan, selalu cabut steker alat.

Memasang dan Mengeluarkan Aki (Fig B)

- Untuk memasang aki (5) dengan aki kedalam celah di bagian belakang alat.
- Pastikan aki betul-betul masuk kedalam celah alat

Penutup aki (11) harus di gunakan untuk menutup bateri sekiranya alat tidak digunakan. Buka penutup aki sekiranya anda ingin menggunakan alat atau anda ingin charge aki anda.

Penting! Jangan simpan atau bawa anda ke tempat yang boleh merusakkan aki anda. Contoh : jika aki tidak digunakan, jauhkan aki dari klip kertas, uang logam, kunci,paku, sekrup atau benda-benda kecil dari logam lainnya,yang dapat menjemban kontak-kontak. Korseling antara kontak-kontak akan dapat mengakibatkan kebakaran atau api.

Memasang dan mengeluarkan bit dan mata obeng (fig. C)

N.B. Aksesoris yang terdapat di dalam manual ini tidak semestinya akan datang dengan alat ini. Alat ini dipasang dengan keyless chuck supaya senang menaruh bits.

Penting! Keluaran bateri dari alat

- Untuk mengunci alat, tekan penggeser maju/mundur(2) diposisi tengah (fig.A)
- Buka chuck (4) dengan memutar selubung (12) berlawanan arah jarum jam dengan satu tangan, sementara memegang bagian belakang (13) dengan sebelah tangan

• Masukkan bits ke dalam chuck

• Ketatkan chuck dengan memutar (12) kearah jarum jam dengan satu tangan, sementara memegang bagian belakang (13) dengan sebelah tangan

Alat ini datang dengan bits yang berlainan di tempat penyimpan bits (7) (fig. A)

• Untuk mengeluarkan bits, tarik bits ke atas dengan tangan

• Untuk menyimpan bits, tekan bits dengan pelan ke dalam penyimpan bits

Leplaskan dan memasang chuck (fig. D)

- Buka gigi chuck sejauh mungkin
- Masukkan obeng ke dalam chuck dan leplaskan sekrup penahan chuck (15) dengan memtar bertarwanan arah jarum jam

• Kencangkan kunci aki ke dalam chuck dan pukul dengan palu seperti yang di tujuhan

• Putar chuck ke arah berlawanan arah jarum jam

• Untuk memasang chuck, putarkan chuck ke dalam shaft kearah jarum jam dan ketatkan chuck dengan menggunakan sekrup

Petunjuk untuk pemakaian

- Ikutilah selalu prosedur untuk keselamatan serta peraturan-peraturan yang telah di sediakan
- Gunakan sedikit tekanan saja. Tekanan berlebihan tidak mempercepat pengeboran, tetapi mengurangi kinerja alat dan dapat memperpendek usia alat
- Gunakan Aki dan Charger Black & Decker sahaja

Charging bateri (fig. A)

• Aki harus di charge terlebih dahulu sebelum di gunakan

• Aki yang baru atau yang sudah lama di tidak dipergunakan, setelah kira-kira 5 kali disi dipakai mencapai dayanya yang maksimum

• Aki akan menjadi panas semasa di charge

• Jangan charge aki di bawah 4°C atau melebihi 40°C. Suhu yang sesuai ialah 24°C

• Jangan menggunakan aki yang tidak sesuai untuk charger yang terdapat pada alat ini

• Pastikan aki berada di alat semasa menggecharge

• Dorong charger (10) kedalam kontak

• Untuk mengeluarkan aki, cabut charger dari alat

• Selalu menggunakan aki yang baru di beli, aki harus di charge lebih kurang 9 jam

• Selalu buka penutup aki, aki harus dicharge 3 hingga 6 jam, la mengambil masa 6 jam sekiranya bateri belum selesai

• Sekiranya aki yang sedang di charge mengalami kerosakan, (i) periksa plug anda, (ii) periksa dan pastikan penggeser maju/mundur di posisi tengah, (iii) Baya alat anda di tempat suhu 4°C hingga 40°C. (iv) Sekiria ia benar -benar rusak, bawa aki dan charger anda ke agen reparasi Black & Decker resmi yang terdekat

• Untuk mengeluarkan aki dengan baik, jangan tinggalkan aki terisi penuh lebih dari 30 hari. Aki akan cepat rusak sekiranya di biar begitu saha

• Sebelum menggunakan alat, cabut charger dari alat dan tanggalkan alat dari charger

• Bilang tanggalkan alat dari charger, pastikan cabut charger dari kontaknya dahulu

• Jangan menggunakan alat semasa adapter charger masih ada di bawah alat

Pilih arah rotasi (fig. F)

• Penggeser maju/mundur (2) adalah untuk memilih arah rotasi. la juga boleh di gunakan untuk mengguncang alat.

Untuk perakitan dan penyetelan sekurup pilih posisi maju. Untuk melepaskan mata obeng pilih posisi mundur

• Untuk memilih rotasi maju, dorong penggeser maju/mundur (2) ke kiri

• Untuk memilih rotasi mundur, dorong penggeser maju/mundur ke posisi tengah

Menyentel momen putar (fig.E)

• Atal ini telah di sediakan dengan menyentel momen putar. Dengan cara melakukan uji coba sebelumnya

dipadankan penyentel mana dari 17 penyentel di ring untuk menyentel momen putar (3) yang memasukkan sekurup tanam sama rata pada permukaan bahan.

• Untuk menggunakan memberi kayu, logam dan plastik putar menyentel momen putar (3) ke arah (17)

• Untuk menyentel sekurup, putar menyentel momen ke posisi yang di inginkan

• Putar menyentel momen (3) ke tahap yang rendah

• Tanam sekurup sama rata dengan permukaan bahan

• Jika setelan momen putar belum, akan meleset klos keselamatan putar segera setelah permukaan sekurup tanam sama rata dengan permukaan bahan atau momen putar yang disetelkan sebelum tercapai

Menghidup dan matikan (fig. A)

• Untuk menghidupkan alat, tekan saklar (1)

• Tekan pada saklar pemakaian keceptan alat

• Untuk menghentikan alat, lepaskan saklar keceptan variable

Penting! Atal akan terkunci sekiranya terlalu banyak tekanan pada bahan yang dikerjakan

• Jangan menghidup-matikan alat yang mungkin tidak menyentelkan, ia dapat mengakibatkan kerusakan pada alat

• Selalu gunakan teknakan pada garis lurus di mata bor

• Gunakan tekanan yang cukup untuk menjaga mata bor tetap menggigit

• Gunakan twist bit,spade bit atau hole saw untuk menggebor kayu

• Gunakan HSS bit untuk menggebor logam

• Beri lapisan minyak yang tipis pada mata bor sekiranya menggebor logam

• Jaga agar motor tetap berjalan sambal menari mata bor keluar dari lobang

Screwdriwing

• Selalu gunakan mata obeng yang sesuai untuk digunakan

• Sekiranya sekurup tidak merembes ke dalam bahan beri lapisan minyak yang tipis pada mata sekurup

Pemeliharaan

Power tool Black & Decker telah dirancang untuk beroperasi selama jangka waktu yang panjang dengan pemeliharaan minimum. Pengoperasian yang memuaskan secara terus-menerus tergantung pada perawatan alat yang benar dan pemberian tetap.

Penting! Keluaran Aki dari alat sebelum membuat pemeliharaan.

• Jaga agar colah ventilasi bersih dan berjarkan kerongka mesin secara teratur dengan kain lembut.

• Begas luar dapat dibersihkan dengan kain lembut. Jangan gunakan cairan pelarut.

Atal ini tidak boleh diservis oleh pemakai. Bawa alat ke agen reparasi resmi BLACK & DECKER. Reparasi hanya dilakukan untuk teknologi yang memenuhi syarat; jika tidak dapat menimbulkan bahaya bagi pemakai.

Aksesoris

Kinerja power tool tergantung pada aksesori yang digunakan. Aksesori Black & Decker dan Piranya dirancang

sempoi standar kualitas tinggi dan dirancang untuk meningkatkan kinerja power tool. Membeli aksesori Black & Decker akan memastikan bahwa Anda mendapatkan yang terbaik dari alat Black & Decker Anda.

• Bit untuk logam - 10mm

• Bit untuk tembok - 10mm

• Bit untuk kayu - 13mm

Black & Decker menawar pilihan luas aksesori yang tersedia di dealer setempat atau pusat servis resmi dengan ongkos tambahan

Melindungi Lingkungan

Jika suatu hari Anda mendapatkan product BLACK & DECKER Anda perlu diganti, atau jika tidak lagi berguna bagi Anda, jangan membuangnya bersama limbah rumah tangga. Produk ini harus diambil terpisah.

Pengambilan produk-produk bekas dan pengemasannya secara terpisah memungkinkan bahan didaur-ulang dan digunakan kembali. Penggunaan ulang bahan yang didaur ulang membantu mencegah polusi lingkungan dan mengurangi permitinan akan bahan mentah.

Informasi Servis

Black & Decker menawarkan jaringan lengkap lokasi servis sah yang dimiliki perusahaan di seluruh Asia. Semua Pusat Servis Black & Decker mempunyai staf yang terdiri dari personil terlatih untuk memberikan servis power tool yang efisien dan handal.

Apakah anda memerlukan nasihat teknis, reparasi, atau bagian pengganti pabrik oriinal, sila hubungi lokasi Black & Decker yang terdekat dengan anda.

Catatan

• Kebijakan Black & Decker merupakan salah satu perbaikan terus - menerus terhadap produk kami, dan dengan demikian kami mempunyai hak untuk mengesahkan spesifikasi produk tanpa pemberitahuan sebelumnya.

• Perlengkapan dan aksesori standar dapat berubah menurut negara.

• Jenis produk lengkap tidak tersedia di semua negara. Hubungi dealer Black & Decker

setempat anda untuk jenis yang tersedia.

12V 10mm 2단 변속 드릴/드라이버 HM1200

기술 자료

무선 드릴/드라이버

HM1200

전압	V	12
무부하 회전수	RPM	350/700
최대 토크	Nm	9
드릴 구멍 크기-목재/철재	mm	13/10
척 크기	mm	1.0-10
중량	g	900
배터리		
전압	V	12
용량	Ah	1.2
중량	g	480
충전기		
대략적인 충전 시간	시간	6
중량	g	170

용도

Black&Decker드릴/드라이버는 스크류드라이버 작업과 목재, 철재 및 플라스틱을 대상으로 하는 드릴 작업을 위해 설계되었습니다.

본 공구는 가정용으로만 사용하도록 되어 있습니다.

공구와 함께 제공된 유형의 Black&Decker배터리를 충전하여 반드시 Black&Decker충전기를 사용해야 합니다.

인전 치점

전동 공구를 사용할 때 화재, 감전, 신체 상해 및 제품 손상의 위험을 줄이기 위해 각 국가에 적용되는 인전 규칙을 항상 준수하십시오. 본 제품은 작동하기 전에 다음의 안전 지침을 익으십시오. 또한 본 지침서를 안전한 장소에 보관하십시오.

다음은 본 설명서에서 사용되는 기호입니다.

▲ 본 설명서의 지침을 준수하지 않은 경우에 나타날 수 있는 신체 상해, 생명 단축, 또는 공구 손상의 위험을 나타냅니다.

△ 화재 위험을 나타냅니다.

◆ 화재 위험을 나타냅니다.

1. 작업 공간을 경계하게 유지하십시오. 작업공간이 산만한 곳에서 작업을 하는 경우 공구가 벽에 부딪힐 수 있습니다.

2. 작업 공간의 환경을 고려하십시오. 전동 공구를 습한 장소에 노출하지 마십시오. 또한 작업 공간의 조명을 250~300룩스 정도로 유지하십시오. 전동 공구를 인화물질이나 가스가 있는 장소에서 사용하지 마십시오.

3. 어린이가 접근하지 못하도록 하십시오. 어린이들이 공구나 연장 코드를 만지지 못하도록 하십시오. 가능하다면 작업 공간에 아무도 접근하지 못하도록 하십시오.

4. 작업에 알맞은 복장을 착용하십시오. 헐렁한 옷이나 장신구는 작업 환경에서 안전하지 않아야 합니다. 작업복은 깨끗하고 깊은 주름이나