

STANLEY®

WWW.STANLEY.COM

STHT82943

Fig. A

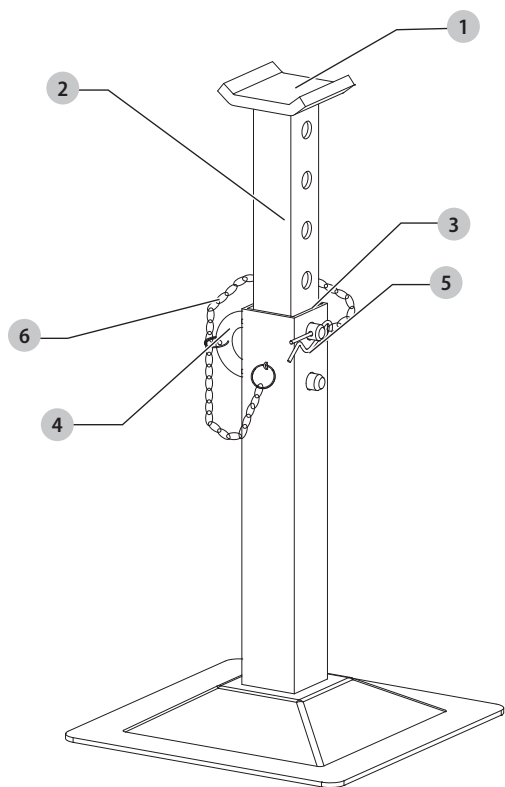


Fig. B


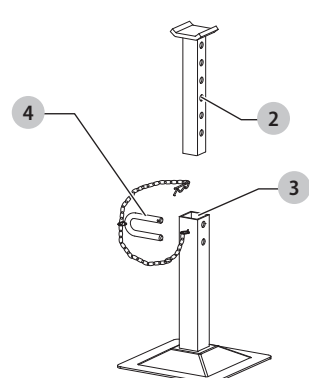


Fig. C

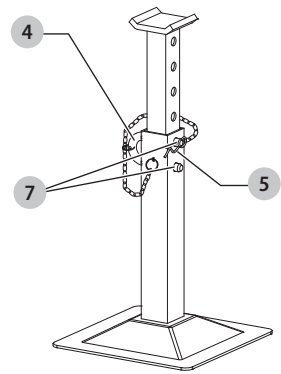

1200 KG- AXLE STANDS

STHT82943

Congratulations!

You have chosen a Stanley tool. Years of experience, thorough product development and innovation make Stanley one of the most reliable partners for professional tool users.

Technical Data

		STHT82943
Working Load	kg	1200
Min. Height	mm	285
Max Height	mm	412



WARNING: To reduce the risk of injury, read the instruction manual.

Definitions: Safety Guidelines

The definitions below describe the level of severity for each signal word. Please read the manual and pay attention to these symbols.



DANGER: Indicates an imminently hazardous situation which, if not avoided, **will** result in **death or serious injury**.



WARNING: Indicates a potentially hazardous situation which, if not avoided, **could** result in **death or serious injury**.



CAUTION: Indicates a potentially hazardous situation which, if not avoided, **may** result in **minor or moderate injury**.

NOTICE: Indicates a practice **not related to personal injury** which, if not avoided, **may** result in **property damage**.



Denotes risk of electric shock.



Denotes risk of fire.

GENERAL SAFETY INSTRUCTIONS

IMPORTANT SAFETY CONSIDERATIONS



WARNING: Before operating this device, be sure to read all content within this manual, ensuring that you understand the operating procedures, maintenance requirements and all safety warnings. All users shall have an understanding of the product, its operating characteristics, and safety operating instructions before operating this device. Safety information shall be emphasized and understood.



WARNING: READ, STUDY, UNDERSTAND AND FOLLOW ALL THE INSTRUCTIONS BEFORE OPERATING THE DEVICE.



Keep this manual in a safe place for later reference.

- Confirm that the load to be applied does not exceed the working load limit of the vehicle support stands.
- conduct a pre-operational check of the equipment.
- Use vehicle support stands on a hard level surface, such as concrete.
- Use vehicle support stands in pairs.
- Check that no part of the underbody of the vehicle will foul as the stands are positioned.
- Ensure that each stand is securely located under a strong point of the vehicle. Consult the vehicles manufacturer's manual for guidance.
- Ensure that the locking mechanism is fully engaged.
- Chock the unlifted wheels of the vehicle.
- Do not extend the height of the stand beyond its maximum working height, nor use any item such as bricks or timber to support the vehicle.
- Modifications **MUST NOT** be carried out or accessories added.

SAVE THESE INSTRUCTIONS FOR FUTURE USE



WARNING

INCORRECT USE MAY RESULT IN INJURY OR DEATH!

USE ONLY IN PAIRS AND ON FLAT HARD LEVEL SURFACES (e.g. CONCRETE), ENSURING THE STAND IS POSITIONED UNDER A SOLID PORTION OF THE VEHICLE AND THAT THE LOCKING MECHANISM IS FULLY ENGAGED.

Package Contents

The package contains:

- 2 Axle Standsa
- 1 Instruction manual
- Check for damage to the tool, parts or accessories which may have occurred during transport.
- Take the time to thoroughly read and understand this manual prior to operation.

Description (Fig. A)



WARNING: Never modify the axle stand or any part of it. Damage or personal injury could result.

- 1 Saddle
- 2 Upper column
- 3 Lower column
- 4 U-Shaped load pin
- 5 Locking pin
- 6 Locking holes

Intended Use

This axle stand is intended to safely support one end of a vehicle.

DO NOT let children come into contact with the tool. Supervision is required when inexperienced operators use this tool.

- **Young children and the infirm.** This tool is not intended for use by young children or infirm persons without supervision.
- This product is not intended for use by persons (including children) suffering from diminished physical, sensory or mental abilities; lack of experience, knowledge or skills unless they are supervised by a person responsible for their safety. Children should never be left alone with this product.

ASSEMBLY AND OPERATION (Fig. B)

Pre-Use Inspection:

- Prior to each use, visual inspection shall be made to the device by checking for abnormal conditions including cracked welds, leaks, and damaged, loose, or missing parts.
- Consult the vehicle owner's manual to determine the location of lift points.
- Other inspections shall be made per product operating instructions.
- This device shall be inspected immediately if the device is believed to have been subjected to an abnormal load or shock. It is recommended that this inspection be made by a manufacturer's authorized repair centre.
- Owners and/or operators should be aware that repair of this equipment may require specialized knowledge and facilities. It is recommended that an annual inspection of the product be made by a manufacturer's authorized repair facility and that any defective parts, decals, or safety labels or signs be replaced with manufacturer's specified parts.
- Be sure to set the vehicle in park with the emergency brake on and chock the unlifted wheels of the vehicle.

- Be sure that the vehicle and the jack are on a hard, level surface.

Assembly:

The axle stands come pre-assembled with an adjustable upper column inserted into the lower column.

OPERATION (Fig. B, C)

Supporting a Load



WARNING: ENSURE THAT BOTH ENDS OF THE U-SHAPED LOAD PIN ARE ALWAYS FULLY INSERTED THROUGH EACH OF THE LOCKING HOLES ON THE UPPER AND LOWER COLUMNS AND IS SECURED USING THE LOCKING PIN. Damage or personal injury could result.

1. Using a suitable jack, lift the vehicle so the axle stands can be positioned into place.
2. Position the axle stand so that the load will be placed on the centre of the saddle.
3. Lift the upper column upward to desired height and **insert both ends** of the U-shaped load pin **4** into the locking holes **6** through both the upper and the lower column.
4. Secure the U-shaped load pin with the locking pin **5**.
5. Slowly lower the vehicle onto the stands. Ensure the load is centred on the saddle.
6. Ensure vehicle is secure and stable before working around or under the vehicle.

Lowering Load

1. Using a suitable jack, lift the vehicle clear of the axle stands.
2. Remove stands from under the vehicle.
3. To lower stands, the locking pin from the U-shaped load pin. **Remove both ends** of the U-shaped load pin **4** from the locking holes **6**.
4. Follow procedures of jack operation to lower vehicle.

Storage

Store in a dry location on a level surface.

1. For easy storage, move the upper column to desired height and **insert both ends** of the U-shaped load pin **4** into the locking holes **7** through both the upper and the lower column.
2. Secure the U-shaped load pin with the locking pin **5**.

Repairs

Any jack that needs repair, is found to be worn, or operates abnormally SHALL BE REMOVED FROM SERVICE UNTIL REPAIRED. It is recommended that necessary repairs be made by a manufacturer's authorized repair facility if repairs are permitted by the manufacturer.

Alterations



WARNING: *Because of potential hazards associated with this type of equipment, no modifications shall be made to the product.*

Attachments and Adapters



WARNING: *Only attachments and/or adapters supplied by the manufacturer shall be used. Serious injury or death can occur if non-factory parts are used.*

One Year Limited Warranty

STANLEY will repair or replace, without charge, any defects due to faulty materials or workmanship for one year from the date of purchase. This warranty does not cover part failure due to normal wear or tool abuse. For further detail of warranty coverage and warranty repair information, visit **www.stanley.com**. This warranty does not apply to accessories or damage caused where repairs have been made or attempted by others. THIS LIMITED WARRANTY IS GIVEN IN LIEU OF ALL OTHERS, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND EXCLUDES ALL INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so these limitations may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary in certain states or provinces.

30 DAY MONEY BACK GUARANTEE

If you are not completely satisfied with the performance of your STANLEY Service Jack for any reason, you can return it within 90 days from the date of purchase with a receipt for a full refund – no questions asked.

LATIN AMERICA: This warranty does not apply to products sold in Latin America. For products sold in Latin America, see country specific warranty information contained in the packaging, call the local company or see website for warranty information.

FREE WARNING LABEL REPLACEMENT: If your warning labels become illegible or are missing, go to www.stanley.com for a free replacement.

STANLEY

Copyright © 2018 Stanley Tools
Stanley Europe, Egide Walschaersstraat 14-16
2800 Mechelen, Belgium
www.2helpU.com

