

STANLEY

®

2 - Beam Self-Leveling Cross Line Laser

CLLi




77-117

Please read these instructions before operating the product



Self-Leveling

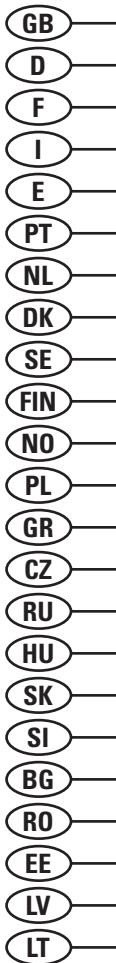

1. Safety
2. Product Description
3. Specifications
4. Operating Instructions
5. Calibration
6. Maintenance and Care
7. Warranty

User Safety


Carefully read the Safety Instructions and User Manual before using this product. The person responsible for the instrument must ensure that all users understand and adhere to these instructions.

Retain this manual for future reference.

IMPORTANT: The following labels are on your laser tool for your convenience and safety. They indicate where the laser light is emitted by the level. **ALWAYS BE AWARE** of their location when using the level.



EN 60825-1

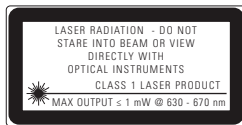

DO NOT remove any warning label(s) on the housing. This instrument must only be used for leveling and layout tasks as outlined in this manual.

ALWAYS make sure that any bystanders in the vicinity of use are made aware of the dangers of looking directly into the laser tool.

DO NOT use in combination with other optical instruments. Do not modify the instrument, or make manipulations or use in other applications than those described in the manual.

DO NOT look into the beam with optical aids, such as magnifiers, binoculars or Telescopes.

DO NOT stare into the laser beam or direct it towards other persons. Make sure the instrument is not set at eye level. Eye protection is normally afforded by natural aversion responses such as the blink reflex.

DO NOT direct the laser beam at other persons.

ALWAYS turn the laser tool "OFF" when not in use. Leaving the laser tool "ON" increases the risk of someone inadvertently staring into the laser beam.

DO NOT operate the laser tool in combustible areas such as in the presence of flammable liquids, gases or dust.

DO NOT disassemble the laser tool. There are no user serviceable parts inside. Disassembling the laser will void all warranties on the product. Do not modify the product in any way. Modifying the laser tool may result in hazardous laser radiation exposure.

DO NOT use this instrument in areas where a risk of explosion is present.

NOTE: Since the laser beam is of the focused type, ensure you check the beam's path over a relatively long distance and take all necessary precautions to ensure the beam cannot interfere with other persons.

Battery Safety

WARNING: Batteries can explode or leak and can cause injury or fire. To reduce this risk:

ALWAYS follow all instructions and warnings on the battery label and package.

DO NOT short any battery terminals

DO NOT charge alkaline batteries.

DO NOT mix old and new batteries. Replace all of them at the same time with new batteries of the same brand and type.

DO NOT mix battery chemistries.

DO NOT dispose of batteries in fire.

ALWAYS keep batteries out of reach of children.

ALWAYS remove batteries if the device will not be used for several months.

NOTE: Ensure that the correct batteries as recommended are used.

NOTE: Ensure the batteries are inserted in the correct manner, with the correct polarity.

End of Life

DO NOT dispose of this product with household waste.

ALWAYS dispose of batteries per local code.



PLEASE RECYCLE in line with local provisions for the collection and disposal of electrical and electronic waste under the WEEE Directive.

Declaration of Conformity

The Stanley Works declares that the CE Mark has been applied to this product in accordance with the CE Marking Directive 93/68/EEC.

This product conforms with EN60825-1:2007.

For further details please refer to www.stanleyworks.com.



EN 60825-1



ROHS Compliant

Product Description

Package Contents

1. Laser Unit
2. Tripod
3. L-Type Bracket
4. Pole Clamp (attaches to L-Type Bracket)
5. Magnetic Mount (attaches to L-Type Bracket)
6. Laser Target
7. Carrying Case
8. Batteries (3 x AA)
9. User Manual

Product Overview

Laser Unit



1. Window for Cross Beam Laser
2. Transport Lock




3. Keyboard
4. Laser Warning Label
5. Battery Compartment Cover



6. 1/4 - 20 Threaded Mount

Tripod

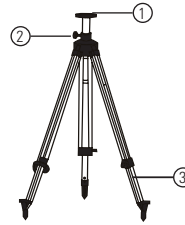


1. 1/4 - 20 Screw Mount
2. Elevator Column
3. Adjustable Legs

L-Type Bracket




1. Keyhole Slots
2. 1/4 - 20 Screw Mount

Pole Clamp

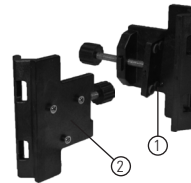

1. Clamp
2. 3 Pin Key

Magnetic Mount

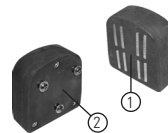

1. Magnetic Strip
2. 3 Pin Key



Leveling Accuracy:	≤ 4 mm / 10 m (≤ 5/32 in / 30 ft)
Horizontal / Vertical Accuracy	≤ 1.5 mm / 3 m (≤ 1/16 in / 10 ft)
Working Range:	Self-Leveling to ± 4°
Working Distance:	≤ 10 m (≤ 30 ft)
Laser Class:	Class 1
Laser Wavelength:	635 nm ± 5 nm
Operating Time:	16 h
Power Voltage:	4,5 V
Power Supply:	3 x AA Batteries (Alkaline)
IP Rating:	IP54
Operating Temperature Range:	-10° C to +40° C (+14° F to +104° F)
Storage Temperature Range:	-20° C to +60° C (-4° F to +140° F)
Weight (without Base and Batteries):	230 g (8 oz)
Size:	88 mm × 48 mm × 90 mm (3 1/2 in × 1 7/8 in × 3 1/2 in)

Battery Installation / Removal

1. Turn laser unit to back. Open battery compartment cover by bending tab out to unlock.
2. Install / Remove batteries. Orient batteries correctly when placing into laser unit.
3. Close and lock battery compartment cover. Be sure tab snaps back into locking feature.



Laser Unit




Locked



Unlocked



Laser ON / OFF

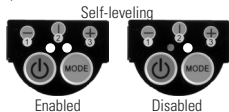


Self-leveling

Enabled


Disabled



Laser Mode

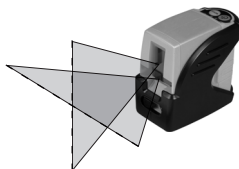

1. Transport lock in locked position. Self-leveling function is disabled.
2. Transport lock in unlocked position. Self-leveling function is enabled.
3. Press power key to power laser ON / OFF. Right LED lights green when laser power is on.
4. Left LED lights blue when laser power is on with self-leveling function disabled. LED is off when self-leveling function enabled.
5. Press laser mode key to toggle through available laser modes - horizontal only, vertical only, both horizontal and vertical.
6. Laser power and laser mode keys are always functional. Can be used when self-leveling function is both enabled or disabled.
7. Laser beam(s) blink to indicate the laser unit is out of the working range. Reposition laser unit to be more level.

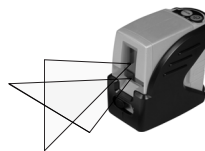

8. Laser beam(s) will dim when battery power is low. Replace batteries.


Tripod



1. 1/4 - 20 screw mount to attach laser unit.



2. Foldable for easier transport.

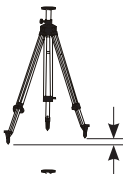

3. Legs are adjustable for uneven ground.



4. Elevator column adjustable for different heights.

L-Type Bracket, Pole Clamp, and Magnet Mount



360° Placement

1. 1/4 - 20 screw mount to attach laser unit. Allows for full 360° placement of the laser unit.




2. Fasten pole clamp to L-type bracket to allow use with tripod or other optional accessories.




3. Fasten magnetic mount to L-type bracket to allow connection to stable and supportive magnetic objects.


Applications

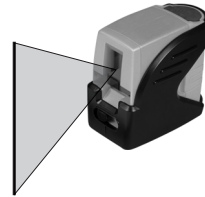


1. **Plumb:**
Using the vertical laser beam, establish a vertical reference plane. Position the desired object(s) until they are aligned with the vertical reference plane to ensure object(s) are plumb.

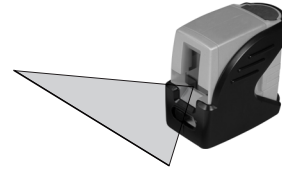

2. **Level:**
Using the horizontal laser beam, establish a horizontal reference plane. Position the desired object(s) until they are aligned with the horizontal reference plane to ensure object(s) are level.

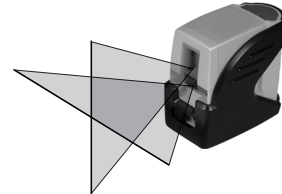

3. **Square:**
Using both the vertical and horizontal laser beams, establish a point where the vertical and horizontal beams cross. Position the desired object(s) until they are aligned with both the vertical and horizontal laser beams to ensure object(s) are square.

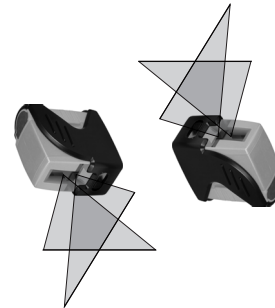


4. **Self-Leveling Disabled:**
Disabling self-leveling function allows laser unit to project a rigid laser beam in any orientation.


NOTE: The laser unit has been calibrated at the time of manufacturing. Periodically check the accuracy of the laser unit to ensure that the calibrated specifications are maintained.

Level Beam Accuracy


1. Place laser unit as shown with laser ON. Mark point P_1 at cross.

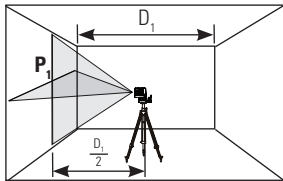


2. Rotate laser unit 180° and mark point P_2 at cross.

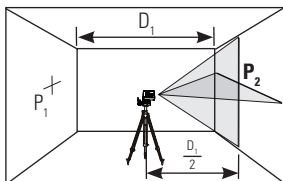


3. Move laser unit close to wall and mark point P_3 at cross.

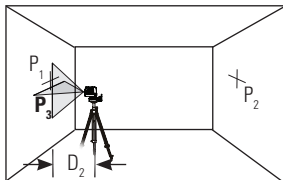

4. Rotate laser unit 180° and mark point P_4 at cross.

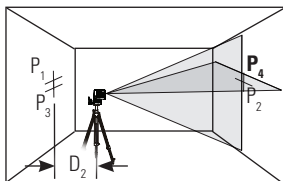

5. Measure the vertical distance from the floor to each point. Calculate the difference between distances D_{P1} and D_{P3} to get D_3 and distances D_{P2} and D_{P4} to get D_4 .

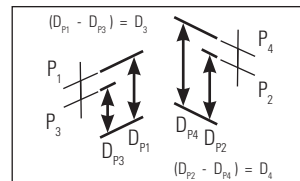

6. Calculate the maximum allowed offset distance and compare to the difference of D_3 and D_4 as shown in the equation. If the sum is not less than or equal to the calculated maximum offset distance the unit must be returned to your Stanley Distributor.

Maximum Offset Distance:

$$\text{Max} = 0,4 \frac{\text{mm}}{\text{m}} \times (D_1 \text{ m} - (2 \times D_2 \text{ m}))$$

$$= 0,0048 \frac{\text{ft}}{\text{ft}} \times (D_1 \text{ ft} - (2 \times D_2 \text{ ft}))$$

Compare:

$$D_3 - D_4 \leq \pm \text{Max}$$

Example: $D_1 = 10 \text{ m}$, $D_2 = 0,5 \text{ m}$

$$D_{P1} = 30,75 \text{ mm}, D_{P2} = 29 \text{ mm}, D_{P3} = 30 \text{ mm}, D_{P4} = 29,75 \text{ mm}$$

$$D_3 = (30,75 \text{ mm} - 30 \text{ mm}) = 0,75 \text{ mm}$$

$$D_4 = (29 \text{ mm} - 29,75 \text{ mm}) = -0,75 \text{ mm}$$


$$0,4 \frac{\text{mm}}{\text{m}} \times (10 \text{ m} - (2 \times 0,5 \text{ m})) = 3,6 \text{ mm} \text{ (maximum allowed offset distance)}$$

$$(0,75 \text{ mm}) - (-0,75 \text{ mm}) = 1,5 \text{ mm}$$


$$1,5 \text{ mm} \leq 3,6 \text{ mm} \text{ (TRUE, unit is within calibration)}$$

Horizontal Beam Accuracy


1. Place laser unit as shown with laser ON. Aim vertical beam to first corner or reference point. Measure out half of the distance D_1 and mark point P_1 .

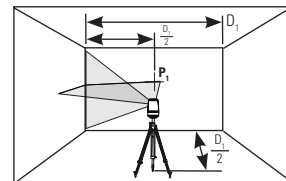

2. Rotate laser unit to other corner or reference point.

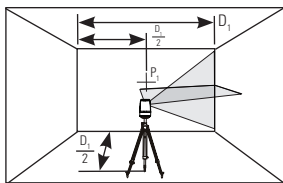

3. Measure the vertical distances between P_1 and the horizontal beam from the 2nd location.

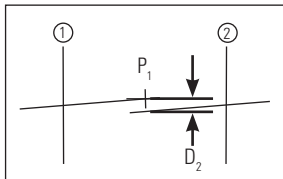

4. Calculate the maximum allowed offset distance and compare to D_2 . If D_2 is not less than or equal to the calculated maximum offset distance the unit must be returned to your Stanley Distributor.

Maximum Offset Distance:

$$\text{Max} = 0,5 \frac{\text{mm}}{\text{m}} \times D_1, \text{m}$$


$$= 0,006 \frac{\text{in}}{\text{ft}} \times D_1, \text{ft}$$
Compare:

$$D_2 \leq \text{Max}$$


Example: $D_1 = 5 \text{ m}$, $D_2 = 1 \text{ mm}$
 $0,5 \frac{\text{mm}}{\text{m}} \times 5 \text{ m} = 2,5 \text{ mm}$ (maximum allowed offset distance)
 $1 \text{ mm} \leq 2,5 \text{ mm}$ (**TRUE**, unit is within calibration)

Vertical Beam Accuracy


1. Measure the height of a door jamb or reference point to get distance D_1 . Place laser unit as shown with laser ON. Aim vertical beam towards door jamb or reference point. Mark points P_1 , P_2 , and P_3 as shown.

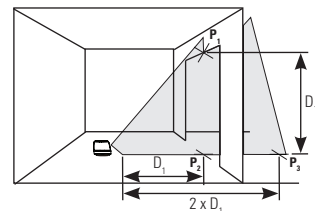

2. Move laser unit to opposite side of door jamb or reference point and align vertical beam with P_1 and P_2 .

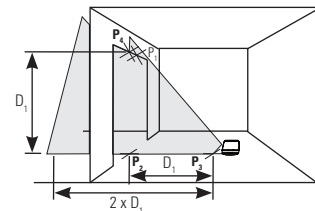

3. Measure the horizontal distances between P_1 and the vertical beam from the 2nd location.

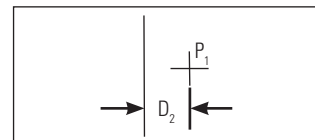

4. Calculate the maximum allowed offset distance and compare to D_2 . If D_2 is not less than or equal to the calculated maximum offset distance the unit must be returned to your Stanley Distributor.

Maximum Offset Distance:

$$\text{Max} = 1 \frac{\text{mm}}{\text{m}} \times D_1, \text{m}$$

$$= 0,012 \frac{\text{in}}{\text{ft}} \times D_1, \text{ft}$$
Compare:

$$D_2 \leq \text{Max}$$

Example: $D_1 = 2 \text{ m}$, $D_2 = 1 \text{ mm}$
 $1 \frac{\text{mm}}{\text{m}} \times 2 \text{ m} = 2 \text{ mm}$ (maximum allowed offset distance)
 $1 \text{ mm} \leq 2 \text{ mm}$ (**TRUE**, unit is within calibration)



Laser unit is not waterproof. **DO NOT** allow to get wet. Damage to internal circuits may result.

DO NOT leave laser unit in direct sunlight or expose it to high temperatures. The housing and some internal parts are made of plastic and may become deformed at high temperatures.

DO NOT store the laser unit in a cold environment. Moisture may form on interior parts when warming up. This moisture could fog up laser windows and cause corrosion of internal circuit boards.

When working in dusty locations, some dirt may collect on the laser window. Remove any moisture or dirt with a soft, dry cloth.

DO NOT use aggressive cleaning agents or solvents.

Store the laser unit in its case when not in use. If storing for extended time, remove batteries before storage to prevent possible damage to the instrument.



One Year Warranty

Stanley Tools warrants its electronic measuring tools against deficiencies in materials and/or workmanship for one year from date of purchase.

Deficient products will be repaired or replaced, at Stanley Tools' option, if sent together with proof of purchase to:

Stanley UK Sales Limited
Gowerton Road
Brackmills, Northampton NN4 7BW

This Warranty does not cover deficiencies caused by accidental damage, wear and tear, use other than in accordance with the manufacturer's instructions or repair or alteration of this product not authorised by Stanley Tools.

Repair or replacement under this Warranty does not affect the expiry date of the Warranty.

To the extent permitted by law, Stanley Tools shall not be liable under this Warranty for indirect or consequential loss resulting from deficiencies in this product.

This Warranty may not be varied without the authorisation of Stanley Tools.

This Warranty does not affect the statutory rights of consumer purchasers of this product.

This Warranty shall be governed by and construed in accordance with the laws of England and Stanley Tools and the purchaser each irrevocably agrees to submit to the exclusive jurisdiction of the courts of England over any claim or matter arising under or in connection with this Warranty.

IMPORTANT NOTE: The customer is responsible for the correct use and care of the instrument. Moreover, the customer is completely responsible for periodically checking the accuracy of the laser unit, and therefore for the calibration of the instrument.

Calibration and care are not covered by warranty.

Subject to change without notice





© 2010 The Stanley Works
Stanley Europe, Egide Walschaertsstraat 14-16,
2800 Mechelen, Belgium
Issue 1 01/10

WWW.STANLEYWORKS.COM