

[www.blackanddecker.com](http://www.blackanddecker.com)


**FSMH13E5**

**ENGLISH**





**5**




**한국어**

**8**

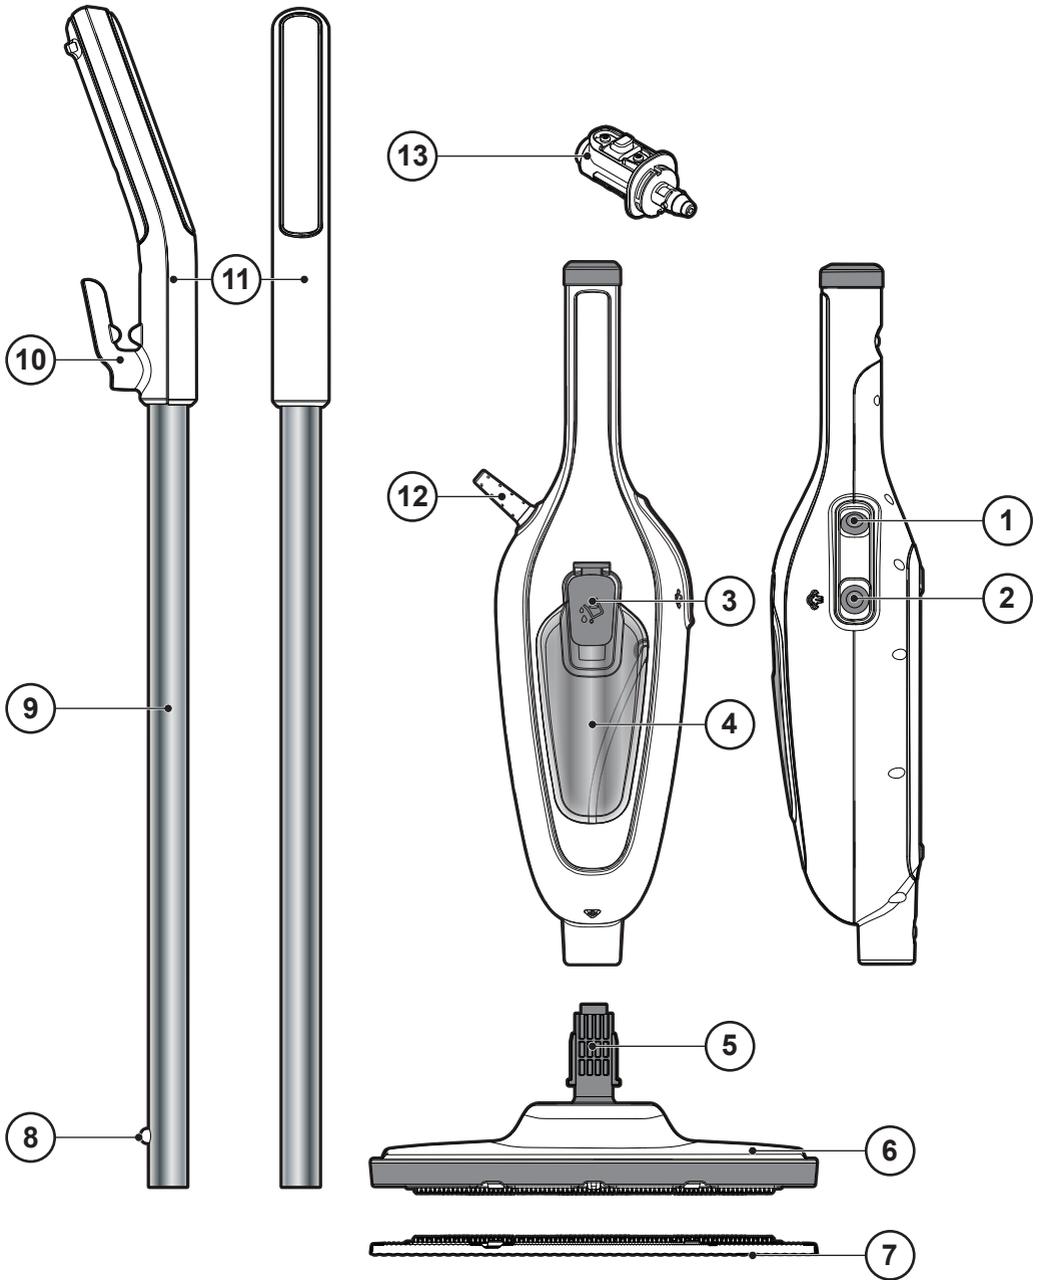

FSMHI3E5

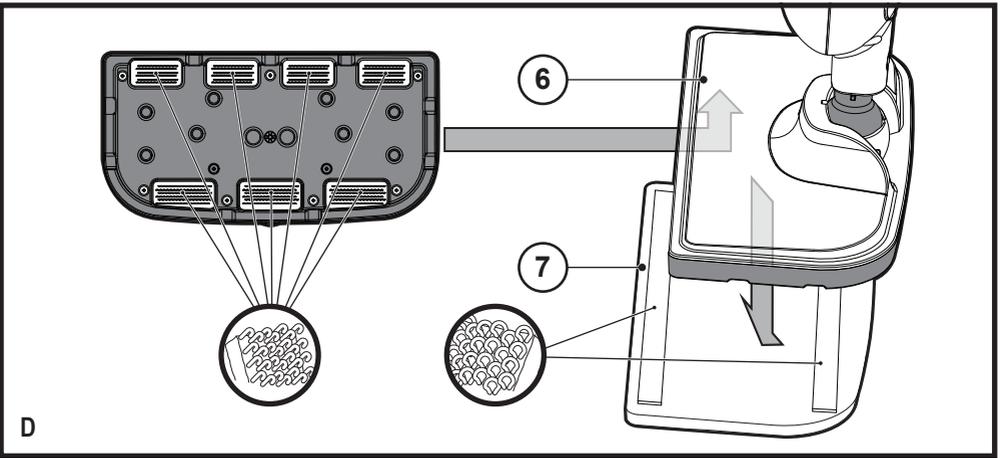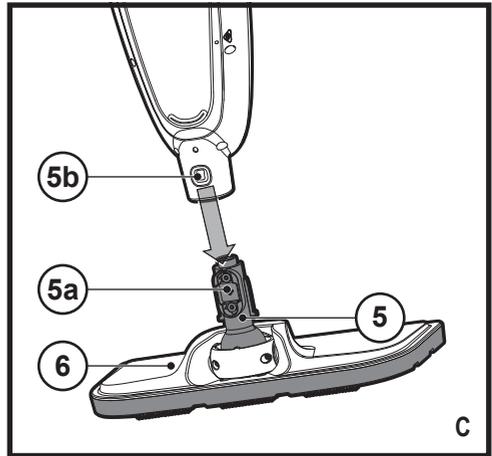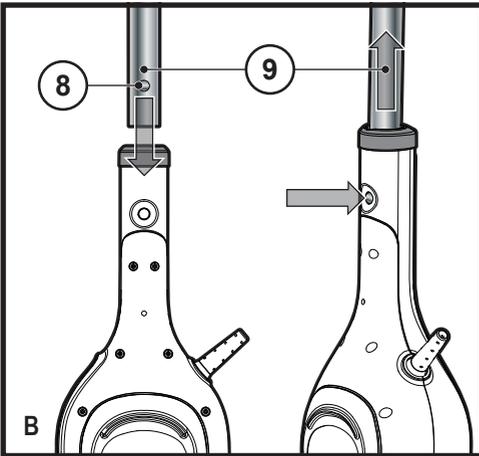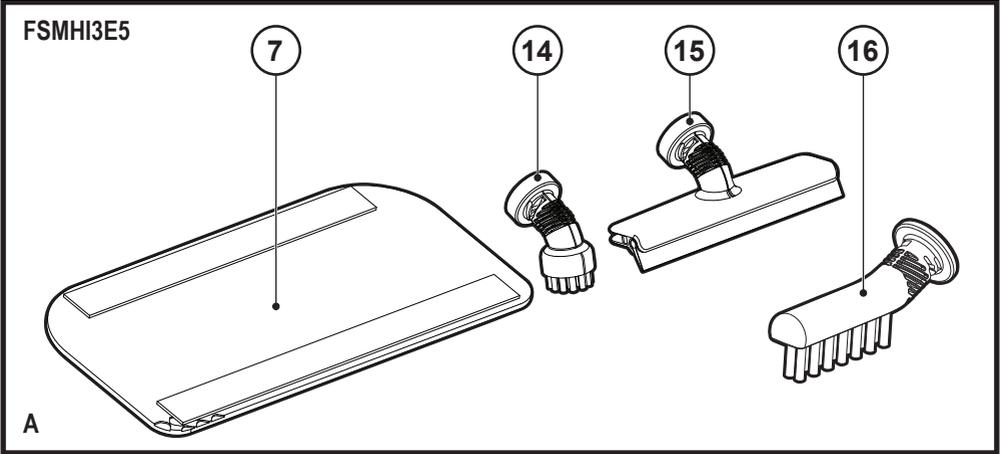

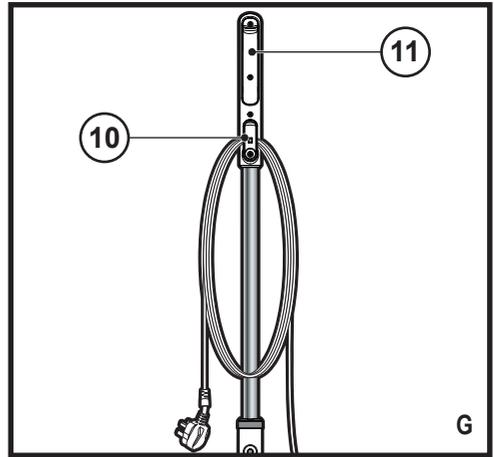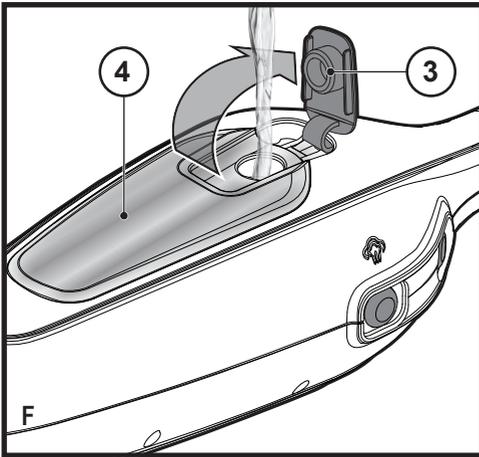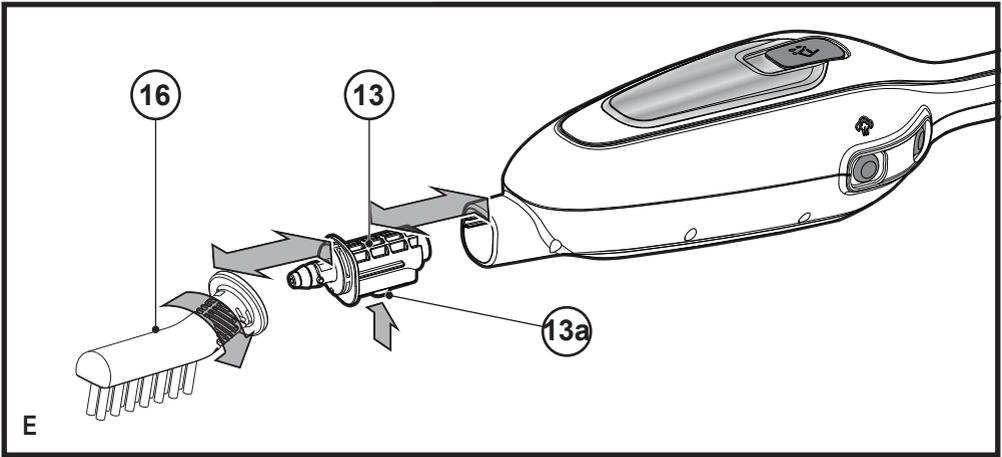

FSMH13E5

STEAM MOP

**Technical Data**

		FSMH13E5
Voltage	V <sub>ac</sub>	220-240V
Power	W	1300
Tank Capacity	ml	380
Weight	kg	1.8

**Intended use**

Your BLACK+DECKER™ FSMH13E5 steam mop has been designed for sanitising and cleaning sealed hardwood, sealed laminate, linoleum, vinyl, ceramic tile, stone and marble floors. This appliance is intended for indoor household use only.

**Safety Instructions**

**Warning! Read all safety warnings and all instructions.** Failure to follow the warnings and instructions listed below may result in electric shock, fire and/or serious injury.



**Warning!** When using main-powered appliances, basic safety precautions, including the following, should always be followed to reduce the risk of fire, electric shock, personal injury and material damage.

- ◆ The intended use is described in this manual. The use of any accessory or attachment or the performance of any operation with this appliance other than those recommended in this instruction manual may present a risk of personal injury.

- ◆ Retain this manual for future reference.

**Using your appliance**

- ◆ Do not direct steam at people, animals, electrical appliances or electrical outlets.
- ◆ Do not expose to rain.
- ◆ Do not immerse the appliance in water.
- ◆ Do not leave the appliance unattended.
- ◆ Do not leave the appliance connected to an electrical outlet when not in use.
- ◆ Never pull the power lead to disconnect the appliance from the socket. Keep the appliance lead away from heat, oil and sharp edges.
- ◆ Do not handle steam cleaner with wet hands.
- ◆ Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or expose cord to heated surfaces.
- ◆ Do not use appliance in an enclosed space filled with vapour given off by oil-base paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapours.
- ◆ Check the type of floor with the manufacturer.
- ◆ Do not use on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.



**Warning!** Do not use on unsealed wood or unsealed laminate floors. On surfaces that have been treated with wax or some no wax floors, the sheen may be removed by the heat and steam action. It is always recommended to test an isolated area of the surface to be cleaned before proceeding. We also recommend that you check the use and care instructions from the floor manufacturer.

- ◆ Never put descaling, aromatic, alcoholic or detergent products into the steam cleaner, as this may damage it or make it unsafe for use.
- ◆ If the home circuit breaker activates while using the steam function, discontinue product use immediately and contact the customer support centre. (Beware of the risk of electrical shock.)
- ◆ The appliance emits very hot steam to sanitize the area of use. This means that the steam head, cleaning pads and carpet attachment get very hot during use.

**Caution!** Always wear suitable shoes when using your steam mop and when changing the accessories on your steam mop. Do not wear slippers or open toed footwear.

- ◆ The lid may become hot during use.
- ◆ Steam may escape from the appliance during use.

- ◆ Care should be taken when using this appliance. DO NOT touch any parts which may become hot during use.
- ◆ Switch the appliance off and return the handle to the upright position before removing the water tank.
- ◆ If steam is observed escaping from the body of the hand held steam cleaner, switch off and disconnect the unit from the mains supply, allow to cool. Contact your nearest authorised repair agent. Do not continue to use the appliance.

### After use

- ◆ Unplug the appliance and allow to cool before cleaning.
- ◆ When not in use, the appliance should be stored in a dry place.
- ◆ Children should not have access to stored appliances.

### Inspection and repairs

- ◆ Unplug the appliance and allow to cool before performing any maintenance or repairs.
- ◆ Before use, check the appliance for damaged or defective parts. Check for breakage of parts, damage to switches and any other conditions that may affect its operation.
- ◆ Regularly check the power lead for damage.
- ◆ Do not use the appliance if any part is damaged or defective.
- ◆ Have any damaged or defective parts repaired or replaced by an authorized repair agent.

- ◆ Never attempt to remove or replace any parts other than those specified in this manual.

## Safety of others

- ◆ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- ◆ Children should be supervised to ensure that they do not play with the appliance.

## Residual risks

Additional residual risks may arise when using the tool which may not be included in the enclosed safety warnings. These risks can arise from misuse, prolonged use etc.

Even with the application of the relevant safety regulations and the implementation of safety devices, certain residual risks can not be avoided. These include:

- ◆ Injuries caused by touching any moving parts.
- ◆ Injuries caused by touching any hot parts.

- ◆ Injuries caused when changing any parts or accessories.
- ◆ Injuries caused by prolonged use of the appliance. When using any appliance for prolonged periods ensure you take regular breaks.

## Electrical safety



**Warning!** This product must be earthed. Always check that the power supply corresponds to the voltage on the rating plate.

Power plugs must match the outlet.

Never modify the plug in any way.

Unmodified plugs and matching outlets will reduce risk of electric shock.

- ◆ If the supply cord is damaged, it must be replaced by the manufacturer or an authorised BLACK+DECKER Service Centre in order to avoid a hazard.

## Extension cables & Class 1 product

- ◆ A 3-core cable must be used as your appliance is earthed and of Class 1 construction.
- ◆ Up to 30m (100 ft) can be used without loss of power.

## Labels on appliance

The following pictograms along with the date code are shown on the appliance.



**CAUTION** Hot Steam



**Warning!** To reduce the risk of injury, the user must read the instruction manual.



**Caution!** Hot surface

## Features

1. On/off switch
2. Steam operate button
3. Water tank access tab
4. Water tank
5. Steam head connector
6. Steam head
7. Steam head cleaning pad
8. Handle connector button
9. Handle
10. Cable tidy hook
11. Grip
12. Power cable
13. Accessory adaptor
14. Small brush (plastic bristles)
15. Small squeegee
16. Grout brush

## Assembly



**Warning!** Before attempting any of the following instructions, make sure that the appliance is switched off and unplugged and the appliance is cold and does not contain any water.

### Attaching the handle (Fig. B)

- ◆ Slide the bottom end of the handle (9) into the top end of the steam mop body until the handle connector button (8) clicks into place.

### Attaching the steam head (Fig. C)

- ◆ Connect the steam mop body to the steam head (6) via

the steam head connector (5), ensuring the connection button (5a) clicks into place in the the opening (5b).

### Attaching a cleaning pad (Fig. D)

Replacement cleaning pads are available from your BLACK+DECKER dealer :- (cat no. FSMP20-A9).

- ◆ Place a cleaning pad (7) on the floor with the velcro 'loop' side facing up.
- ◆ Lightly press the steam mop down onto the cleaning pad (7).

**Caution:** Always place your steam mop with the handle (9) supported in the upright position when stationary and make sure the steam mop is turned off when not in use.

### Removing a cleaning pad

**Caution!** Always wear suitable shoes when changing the cleaning pad on your steam mop. Do not wear slippers or open toed footwear.

- ◆ Return the handle (9) to the upright position and turn the steam mop 'OFF'.
- ◆ Wait until the steam mop cools down (approximately 5 minutes).
- ◆ Lift the steam mop away from the cleaning pad freeing it from the velcro fastening.

**Caution!** Always place your steam mop with the handle (9) supported in the upright position when stationary and make sure the steam mop is turned off when not in use.

### Using as a hand held unit

- ◆ Disconnect the hand held unit from the steam head by pushing the connection button (5a) figure C.
- ◆ Remove the handle (9) from the hand held unit by pushing the handle connector button (8) figure B.

### Fitting accessories (Fig. E)

- ◆ Fit the accessorie adaptor (13) into the main body of the unit ensuring the button (13a) clicks into the relevant opening.
- ◆ Attach the required accessorie to the accessorie adaptor (13) and twist clockwise to lock into place.

### Filling the water tank (Fig. F)

**Note!** Fill the water tank with clean tap water.

**Note!** In areas of hard water, the use of de-ionised water is recommended.

- ◆ Open the water tank access tab (3).
- ◆ Fill the water tank (4) with water.

**Warning!** Your water tank has a 380ml capacity. Do not over fill the tank.

- ◆ Replace the water tank access tab.

**Note!** Ensure the water tank access tab is firmly secured.

**Note!** Do not use chemical cleaners with your steam mop water tank.

## Use

**Important!** This unit will kill 99.9% of bacteria and germs when used in accordance with the instructions in this manual and with the micro fibre pad fitted and a continuous run time of 90 seconds.

## Switching on and off

- ◆ To switch the appliance on, press the ON/Off button (1). It takes approximately 15 seconds for the steam mop to heat up.
- ◆ Press the steam operation button (2). This will operate the pump and the unit will begin to produce steam.
- ◆ To stop steam generation, turn the steam operation button (2) to off. This will maintain power to the boiler for quicker start up.
- ◆ To switch the appliance off, press the ON/Off button (1).

**Caution!** Never leave the steam mop in one spot on any surface for any period of time.

Always place the steam mop with the handle (9) supported in the upright position when stationary and make sure the steam mop is turned off when not in use.

**Caution!** Always empty the steam mop after use.

**Note!** When first filled or after running dry, it can take up to 45 seconds for steam to be produced.

## Hints for optimum use

### General

**Caution:** Never use the steam mop without first attaching a cleaning pad.

- ◆ Always vacuum or sweep the floor before using the steam mop.
- ◆ The easiest way to use the appliance is to tilt the handle to a 45° angle and clean slowly, covering a small area at a time.
- ◆ Do not use chemical cleaners with your steam mop. To remove stubborn stains from vinyl or linoleum floors, you can pre-treat with a mild detergent and some water before using the steam mop.

### Steam Cleaning

- ◆ Place a cleaning pad (7) on the floor with the velcro 'loop' side facing up.
- ◆ Lightly press the steam mop down onto the cleaning pad (7).
- ◆ Connect the steam mop to the mains.
- ◆ Press the ON/OFF button (1). It takes approximately 15 seconds for the steam mop to heat up.
- ◆ Press the steam operate button (2). After a few seconds, steam will start to come out of the steam head.

**Note!** When first filled or after running dry, it can take up to 45 seconds for steam to be produced.

- ◆ It takes a few seconds for steam to enter the cleaning pad.

The steam mop will now glide easily over the surface to be sanitized/cleaned.

- ◆ Push and pull the steam mop slowly across the surface to thoroughly steam clean each section.
- ◆ When you have finished using the steam mop, return the handle (9) to the upright position, making sure that it is supported and turn it 'OFF'. Wait until the steam mop cools down (approximately five minutes).

**Caution!** It is important to monitor the water level in the water tank (4). To refill the water tank and continue to sanitize/clean stand the mop upright making sure that the handle is supported and turn the steam mop 'OFF'. Unplug the unit from the electrical wall outlet, refill the water tank (4).

**Caution!** Never leave the steam mop in one spot on any surface for any period of time. Always place the steam mop with the handle (9) supported in the upright position when stationary and make sure the steam mop is turned off when not in use.

### After use (Fig. G)

- ◆ Turn the steam mop 'OFF'. turn the steam operation button (2) to off and then press the ON/OFF button (1).
- ◆ Wait until the steam mop cools down.
- ◆ Unplug the steam mop from the electrical wall outlet.
- ◆ Empty the water tank.
- ◆ remove the cleaning pad (7) and wash it ready for next use.
- ◆ Wrap the power supply cable around the tidy hook (10).

## Troubleshooting

If your appliance seems not to operate properly, follow the instructions below. If this does not solve the problem, please contact your local BLACK+DECKER repair agent.

Problem	Step	Possible solution
The steam mop is not turning on	1.	Check the unit is plugged in at the wall socket.
	2.	Check the unit is switched on using the ON/OFF switch (1)
The steam mop is not producing steam	3.	Check the water tank (4) is full. <b>NOTE:</b> When first filled or after running dry it can take up to 45 seconds for steam to be produced.
	4.	Check the steam generation button is in the ON position (2).
	5.	The steamer is equipped with a thermostat and a thermal cut-out. If for any reason the steamer overheats it will switch off. If this happens turn off and unplug the steamer, allow to cool for 2 to 4 hours and re-try.

## Maintenance and cleaning

Your BLACK+DECKER corded appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper appliance care and regular cleaning.

**Warning!** Before performing any maintenance or cleaning on corded appliances switch off and unplug the appliance.

- ◆ Wipe your appliance over using a soft damp cloth.
- ◆ For stubborn marks you can use a mild solution of soap and water to dampen your cloth.

## Care of the cleaning pads

**Wash care instructions** - No fabric conditioner - Allow to dry fully before re-use.

**Caution!** Follow the cleaning instructions printed on the label of the cleaning pad.

## Protecting the environment



Separate collection. Products and batteries marked with this symbol must not be disposed of with normal household waste.

available for separate collection.



Separate collection of used products and packaging allows materials to be recycled and used again. Re-use of recycled materials helps prevent environmental pollution and reduces the demand for raw materials.

Local regulations may provide for separate collection of electrical products from the household, at municipal waste sites or by the retailer when you purchase a new product.

Black & Decker provides a facility for the collection and recycling of Black & Decker products once they have reached the end of their working life. To take advantage of this service please return your product to any authorised repair agent who will collect them on our behalf.

## Service Information

BLACK+DECKER offers a full network of company-owned and authorized service locations throughout Asia. All BLACK+DECKER Service Centers are staffed with trained personnel to provide customers with efficient and reliable product service.

Whether you need technical advice, repair, or genuine factory replacement parts, contact the BLACK+DECKER location nearest to you.

## NOTE

- ◆ BLACK+DECKER's policy is one of continuous improvement to our products and, as such, we reserve the right to change product specifications without prior notice.
- ◆ Standard equipment and accessories may vary by country.
- ◆ Product specifications may differ by country.
- ◆ Complete product range may not be available in all countries. Contact your local BLACK+DECKER dealers for range availability.

Should you find one day that your Black & Decker product needs replacement, or if it is of no further use to you, do not dispose of it with household waste. Make this product

## FSMH13E5

## 스팀압

## 기술 데이터

		FSMH13E5
전압	$V_{ac}$	220-240V
전력	W	1300
탱크 용량	ml	380
무게	kg	1.8

## 용도

BLACK+DECKER™ FSMH13E5 스팀압은 코팅 및 방수 처리된 합판, 코팅 및 방수 처리된 원목 리놀륨, 비닐, 세라믹 타일, 석재 및 대리석 바닥의 오염 물질을 제거하고 청소할 수 있도록 제작되었습니다. 본 제품은 실내가 정용입니다.

## 안전 지침



**경고! 안전 경고와 지시 사항을 모두 읽으십시오.** 아래 나열된 경고와 지시 사항을 준수하지 않으면 감전 및 화재 또는 심각한 부상을 초래할 수 있습니다.



**경고! 주 전원 공급으로 구동되는 제품을 사용할 때는 화재, 감전, 신체 부상 및 제품 손상 위험을 줄이기 위해 항상 다음과 같은 기본적인 안전 주의 사항에 따라 사용해야 합니다.**

- ◆ 제품을 사용하기 전에 본 사용 설명서 전체 내용을 잘 읽고 숙지해 주십시오.
- ◆ 본 사용 설명서에 제품의 용도가 설명되어 있습니다. 본 사용 설명서에서 권장하는 방식 이외의 다른 방식으로 본 제품을 조작하거

나 액세서리 또는 부착물을 사용하는 경우 신체 부상의 위험이 있을 수 있습니다.

- ◆ 향후 참고할 수 있도록 본 사용 설명서를 잘 보관해두십시오.

## 제품 사용

- ◆ 사람, 동물, 가전 제품 또는 전기 콘센트 쪽으로 스팀이 향하지 않도록 하십시오.
- ◆ 비에 노출되지 않도록 하십시오.
- ◆ 본 제품을 물에 담그지 마십시오.
- ◆ 본 제품을 방치하지 마십시오.
- ◆ 사용하지 않을 때는 제품을 전기 콘센트에 연결한 상태로 두지 마십시오.
- ◆ 제품을 소켓에서 분리할 때 절대로 충전기 리드 선을 잡아당기지 마십시오. 제품이 열, 오일 및 날카로운 가장자리에 닿지 않도록 하십시오.
- ◆ 스팀 클리너를 젖은 손으로 다루지 마십시오.
- ◆ 코드로 잡아 당기거나 들고 다니거나, 코드를 손잡이로 사용하거나 날카로운 모서리 주변으로 코드를 잡아당기거나 코드를 가열된 표면에 노출시키지 마십시오.
- ◆ 유성 도료 희석제에서 분비되는 증기, 일부 방충 가공, 가연성 분진 또는 기타 폭발성 또는 독성 증기가 가득한 밀폐된 공간에서 제품을 사용하지 마십시오.
- ◆ 바닥 유형은 제조업체에 문의하여 확인하십시오.
- ◆ 가죽, 왁스 광택제 가구 또는 바닥, 합성 섬유, 벨벳 또는 기타 약

하고 증기에 민감한 재질에서 사용하지 마십시오.



**경고!** 비처리 목재 또는 비처리 합판 바닥에서 사용하지 마십시오. 왁스로 처리된 표면 또는 일부 왁스가 처리되지 않은 바닥은 열과 증기 작용으로 인해 광택이 벗겨질 수 있습니다. 항상 진행하기 전에 청소할 표면의 고립된 영역을 테스트해 보는 것이 좋습니다. 또한 마루 제조업체의 사용 및 주의 지시 사항을 확인하는 것이 좋습니다.

- ◆ 방향성, 알코올 또는 세제 제품을 스팀 클리너에 넣지 마십시오. 이로 인해 제품이 손상되거나 사용시 안전하지 않을 수 있습니다.
- ◆ 스팀 기능을 사용하는 동안 가정의 회로 차단기가 작동하는 경우, 즉시 제품 사용을 중단하고 고객 지원 센터에 문의하십시오. (감전 위험에 대해 주의하십시오.)
- ◆ 본 제품은 매우 뜨거운 증기를 내뿜어서 사용 영역을 살균합니다. 이는 스팀 헤드, 클리닝 패드 및 카펫 부착물이 사용 중에 매우 뜨거워진다는 의미입니다.
- ◆ 주의! 스팀맷을 사용하고 스팀맷의 액세서리를 바꿀 때는 적합한 신발을 신고 하십시오. 슬리퍼 또는 발가락 부분이 트인 신발을 신지 마십시오.
- ◆ 뚜껑은 사용 중에 뜨거워질 수 있습니다.
- ◆ 사용 중에 제품에서 증기가 새어나갈 수 있습니다.

- ◆ 이 제품을 사용할 때는 각별히 주의해야 합니다. 사용 중에 뜨거워질 수 있는 부품을 만지지 마십시오.
- ◆ 물 탱크를 분리하기 전에 제품 스위치를 끄고 핸들을 똑바로 세워 두십시오.
- ◆ 스팀이 소형 스팀 클리너의 본체에서 빠져 나오는 것이 보일 경우, 스위치를 끄고 기기를 메인 공급 장치에서 분리하고 열을 식히십시오. 가까운 공인 수리점에 문의하십시오. 제품을 계속해서 사용하지 마십시오.

## 사용 후

- ◆ 청소한 후에 제품의 플러그를 뽑아서 열을 식히십시오.
- ◆ 사용하지 않을 때에는 본 제품을 습기가 없는 건조한 장소에 보관해야 합니다.
- ◆ 어린이가 보관된 제품을 만지지 못하도록 해야 합니다.

## 검사 및 수리

- ◆ 유지 보수하거나 수리하기 전에 제품의 플러그를 뽑아서 열을 식히십시오.
- ◆ 사용 전, 제품에 손상되거나 결함 있는 부품이 있는지 점검하십시오. 부품 및 스위치 파손 등 정상적인 제품 사용에 영향을 미칠 수 있는 이상이 있는지 점검하십시오.

- ◆ 전원 리드 선의 손상 여부를 주기적으로 점검하십시오.
- ◆ 손상되거나 결함이 있는 부품이 있는 경우에는 제품을 사용하지 마십시오.
- ◆ 손상되거나 결함이 있는 부품은 공인 수리 대리점에 의뢰하여 교체 또는 수리하십시오.
- ◆ 본 사용 설명서에 명시된 내용 이외에는 어떤 부품도 제거하거나 교체하지 마십시오.

- ◆ 뜨거운 부품을 만져 발생하는 부상.
- ◆ 부품 또는 액세서리 변경으로 인한 부상.
- ◆ 장시간에 걸친 제품 사용으로 인한 부상. 어떤 제품이든 장시간에 걸쳐 사용할 때는 반드시 정기적인 휴식을 취하십시오.

## 전기 안전



**경고! 본 제품은 접지해야 합니다. 전원이 전동기 라벨에 기재된 전압과 일치하는지 항상 확인하십시오.**

전원 플러그는 콘센트와 형식이 일치해야 합니다.

플러그를 어떤 형태로든 개조하지 마십시오.

개조되지 않은 플러그 및 형식이 일치하는 콘센트를 사용하면 감전 위험이 줄어듭니다.

- ◆ 전원 코드가 손상된 경우 사고가 발생하지 않도록 제조업체 또는 공인 BLACK+DECKER 서비스 센터에서 교체해야 합니다.

## 연장 케이블 및 Class 1 제품

- ◆ 제품이 접지되어 있고 Class 1 구조이므로 3심 케이블을 사용해야 합니다
- ◆ 최대 30m까지 동력이 약해지지 않고 사용할 수 있습니다.

## 다른 사람들의 안전

- ◆ 이 제품은 신체, 지각능력 또는 정신능력이 낮거나 경험 및 지식이 부족한 사람(어린이포함)이 사용하도록 설계되지 않았습니다. 어린이가 제품을 가지고 놀게 해서는 안됩니다. 청소 및 유지 보수를 할 때 감독 없이 어린이 혼자 해서는 안됩니다.
- ◆ 어린이가 본 제품을 가지고 놀지 못하도록 항상 주시해야 합니다.

## 기타 발생 가능한 위험

청소기를 사용할 때 동봉된 안전 경고에 포함되어 있지 않은 기타 발생 가능한 위험들이 발생할 수 있습니다. 이러한 위험은 오용, 장시간 사용 등으로 인해 발생할 수 있습니다. 관련된 안전 규정을 준수하고 안전 장치를 사용한다고 해도 어떤 위험들은 피하지 못할 수도 있습니다. 이러한 위험으로는 다음과 같은 것들이 있습니다.

- ◆ 작동 부품을 만져 발생하는 부상.

## 제품에 부착된 라벨

청소기에는 다음과 같은 그림이 있습니다.



### 주의 뜨거운 증기



**경고!** 부상의 위험을 줄이려면 사용자는 사용 설명서를 주의 깊게 읽어야 합니다.



### 주의! 뜨거운 표면

### 기능

1. 물탱크 예열 버튼
2. 스팀 작동 버튼
3. 물 탱크 뚜껑 탭
4. 물 탱크
5. 플로어 헤드 연결관
6. 스팀 헤드
7. 클리닝 패드
8. 핸들 커넥터 버튼
9. 핸들
10. 케이블 정돈 걸이
11. 손잡이
12. 전원 케이블
13. 액세서리 어댑터
14. 청소용 솔
15. 유리창 청소 노즐
16. 틈새 청소용 솔

### 조립



**경고!** 다음 지침을 시도하기 전에, 제품 전원이 꺼졌고 플러그가 분리되었으며 제품이 식었고 물이 들어있지 않은지 확인하십시오.

### 핸들 장착(그림 B)

- ◆ 핸들 연결 버튼(8)이 제 자리에서 소리가 날 때까지 핸들의 하단 끝(9)이 스팀맷 본체의 핸들 결합 부위 끝까지 들어가서 고정되도록 합니다.

### 스팀 헤드 장착(그림 C)

- ◆ 스팀 헤드커넥터(5)의 연결버튼(5a)이 본체 고정 구멍(5b)의 위치에서 소리가 나며 고정될때 까지 합니다.

### 클리닝 패드 부착(그림 D)

교체 클리닝 패드는 BLACK+DECKER 판매점에서 구입할 수 있습니다(카탈로그 번호 FSMP20-A9).

- ◆ 벨크로 '고리' 쪽이 위를 향하도록 한 상태에서 클리닝 패드(7)를 바닥에 놓으십시오.
- ◆ 스팀맷을 클리닝 패드(7)에 놓고 살짝 아래로 누릅니다.

**주의:** 패드 부착 시에는 반드시 스팀맷이 꺼졌는지 확인하십시오.

### 클리닝 패드 제거

**주의!** 스팀맷의 클리닝 패드를 교체할 때는 항상 적합한 신발을 신으십시오. 슬리퍼 또는 발가락 부분이 트인 신발을 신지 마십시오.

- ◆ 1) 스팀맷의 스팀작동버튼(2)과 탱크예열버튼(1)을 OFF로 합니다.
- ◆ 2) 스팀맷이 식을때까지 기다리십시오.(약 5분)
- ◆ 3) 스팀맷을 클리닝 패드에서 들어올려서 벨크로 체결을 풀니다.

**주의!** 클리닝 패드 제거는 반드시 스팀맷이 식은 후 하십시오.

### 핸드헤드 장치 사용

- ◆ 연결 버튼(5a)을 눌러서 스팀 헤드에서 스팀 핸드 장치를 분리합니다(그림 C).
- ◆ 핸들 연결 버튼(8)을 눌러서 스팀 핸드 장치에서 핸드(9)를 분리합니다(그림 B).

### 액세서리 장착(그림 E)

- ◆ 스팀헤드 제거 후, 악세사리 어댑터(13)를 장착합니다.
- ◆ 필요한 액세서리를 액세서리 어댑터(13)를에 장착하고 시계 방향으로 돌려서 제위치에 잠급니다.

### 물 탱크 보충(그림 F)

**참고!** 물 탱크는 깨끗한 수돗물로 채우십시오.

**참고!** 경수 지역의 경우, 비이온화 물을 사용하는 것이 좋습니다.

- ◆ 물 탱크 뚜껑 탭(3)을 엽니다.
- ◆ 물 탱크(4)에 물을 채우십시오.

**경고!** 물탱크의 4/3 또는 80% 이상 물을 넣지 마십시오.

- ◆ 물탱크 뚜껑 탭(캡)을 닫고 눌러서 고정 합니다.

**참고!** 물 탱크 뚜껑 탭이 단단히 고정되었는지 확인하십시오.

**참고!** 스팀맷 물 탱크에 화학제품 클리너를 사용하지 마십시오.

### 사용법

**중요!** 이 기기는 본 설명서의 지침에 따라 사용하고 초극 세사 패드를 부착하고 90초 동안 연속 작동했을 때 세균과 미생물을 99.9% 살균할 것입니다.

## 전원 켜기/끄기

- ◆ 제품 스위치를 켜려면, 탱크예열버튼을 누릅니다. 스팀맵을 예열하려면 약 15초가 걸립니다.
- ◆ 스팀 작동 버튼(2)을 누릅니다. 이렇게 하면 펌프가 작동되어 장치에서 스팀을 생성하기 시작합니다.
- ◆ 스팀 생성을 멈추려면, 스팀 작동 버튼(2)을 OFF로 놓으십시오. 이렇게 하면 보일러로 공급되는 전력이 유지되어 더 빨리 시동됩니다.
- ◆ 제품 스위치를 끄려면, 탱크예열버튼을 누릅니다.

**주의!** 일정 기간 동안 스팀맵의 모든 표면에 얼룩이 남아 있도록 두지 마십시오.

항상 고정 시에는 수직 위치로 하고 핸들(9)을 지지한 상태로 스팀맵을 놓고 사용하지 않을 때는 스팀맵이 꺼졌는지 확인하십시오.

**주의!** 항상 사용 후에는 물통을 비워주세요.

**참고!** 처음 물을 채웠거나 건조한 상태로 작동한 후에는 스팀이 생성되는 데 최대 45초 걸릴 수 있습니다.

## 최적의 사용법

\*스팀 청소기 사용시 케이블을 손으로 잡지 마십시오.

\*이제품은 셀프 스탠딩 기능이 없습니다. 핸들을 잡고 있지 않을때는 바닥에 누어놓거나, 제품을 옆으로 기울여 벽면에 기대어 놓으십시오.

## 일반

**주의!** 절대로 클리닝 패드를 장착하지 않은 상태에서 스팀맵을 사용하지 마십시오.

- ◆ 스팀맵을 사용하기 전에 항상 바닥을 진공 청소하거나 빗자루로 청소하십시오.
- ◆ 제품을 사용하는 가장 쉬운 방법은 핸들을 45°로 기울여서 한 번에 적은 영역을 천천히 청소하는 것입니다.
- ◆ 스팀맵에 화학제품 클리너를 사용하지 마십시오. 비닐 또는 리놀륨 바닥에서 없애기 힘든 오염을 제거하려면, 스팀맵을 사용하기 전에 중성 세제와 약간의 물로 사전 처리할 수 있습니다.

## 스팀 청소

- ◆ 벨크로 '고리' 쪽이 위를 향하도록 한 상태에서 클리닝 패드(7)를 바닥에 놓으십시오.
- ◆ 스팀맵을 클리닝 패드(7)에 놓고 살짝 아래로 누릅니다.
- ◆ 스팀맵을 메인 콘센트에 연결합니다.
- ◆ 탱크예열버튼을 누릅니다. 스팀맵을 예열하려면 약 15초가 걸립니다.
- ◆ 스팀 작동 버튼(2)을 누릅니다. 몇 초 후에 스팀 헤드에서 증기가 나오기 시작합니다.

**참고!** 처음 물을 채웠거나 건조한 상태로 작동한 후에는 스팀이 생성되는 데 최대 45초 걸릴 수 있습니다.

- ◆ 스팀이 클리닝 패드에 들어가려면 몇 초가 걸립니다. 스팀맵은 살균/청소할 표면 위로 쉽게 미끄러집니다.

- ◆ 표면에서 천천히 스팀맵을 이동 하며 모든 부분을 철저히 스팀 청소합니다.
- ◆ 스팀맵 사용을 마쳤으면, 스팀맵의 전원이 꺼졌는지 확인하고, 스팀맵이 식을때까지 기다렸다(약5분) 패드를 제거 하십시오.

**주의!** 물 탱크(4)의 수위를 모니터링하는 것이 중요합니다. 물탱크(4)의 물을 보충 하려면, 스팀맵의 스위치(1),(2)모두 OFF상태인지 확인 후, 플러그를 뽑고, 스팀 분사 부위가 바닥에 닿아 있는 상태에서 물탱크(4)를 다시 채웁니다.

**주의!** 일정 기간 동안 스팀맵의 모든 표면에 얼룩이 남아 있도록 두지 마십시오. 항상 고정 시에는 수직 위치로 하고 핸들(9)을 지지한 상태로 스팀맵을 놓고 사용하지 않을 때는 스팀맵이 꺼졌는지 확인하십시오.

## 사용 후(그림 G)

- ◆ 스팀작동버튼(2)을 OFF로 바꾼다음 탱크 예열 버튼(1)을 OFF로 누르십시오.
  - ◆ 스팀맵이 식을 때까지 기다리십시오.(약5분)
  - ◆ 전기 벽 콘센트에서 스팀맵의 플러그를 뽑으십시오.
  - ◆ 물 탱크를 비우십시오.
  - ◆ 클리닝 패드(7)를 분리하고 다음 사용을 위해 닦아 놓으십시오.
  - ◆ 정돈 길이(10)에 전원 공급 케이블을 정리합니다.
  - ◆ 케이블 정리 시 당기거나 팽팽하게 감지 마십시오.
- 주의!** 사용 중이나 보관 할때 케이블을 강하게 당기거나, 팽팽하게 하지 마십시오.

### 문제 해결

제품이 제대로 작동하지 않는 것 같은 경우, 아래의 지침을 따르십시오. 문제가 해결되지 않는 경우, 가까운 BLACK+DECKER 수리 대리점에 문의하십시오.

문제	조치	가능한 해결책
스팀압이 켜지지 않는다	1.	벽 콘센트에 기기의 플러그가 꽂혀 있는지 확인하십시오.
	2.	탱크야열 버튼(1)과 스팀 분사버튼(2)이 ON으로 되어있는지 확인하십시오.
스팀압에서 스팀이 나오지 않는다	3.	물 탱크(4)가 가득 차는지 확인하십시오. <b>참고:</b> 처음 물을 채웠거나 건조한 상태로 작동한 후에는 스팀이 생성되는 데 최대 45초 걸릴 수 있습니다.
	4.	스팀 생성 버튼이 ON 위치(2)에 있는지 확인하십시오.
	5.	스티머에는 온도 조절 장치와 열차폐장치가 장착되어 있습니다. 어떤 이유로든 스티머가 과열된 경우 스위치를 끄십시오. 이러한 경우 스티머를 끄고 플러그를 뽑아서 2~4 시간 동안 식힌 후 다시 시도하십시오.

### 유지보수 및 청소

BLACK+DECKER 유선 제품은 최소한의 유지 보수로 장기간에 걸쳐 작업이 가능하도록 설계되어 있습니다. 만족스러운 동작을 계속 유지하려면 적절한 제품 관리와 정기적인 청소가 필요합니다.

경고! 유선 제품의 유지 보수 또는 청소를 수행하기 전에 전원을 끄고 제품의 플러그를 뽑으십시오.

- ◆ 부드러운 젖은 헝겊으로 제품을 닦으십시오.
- ◆ 없애기 힘든 자국이 있는 경우, 따뜻한 비누와 물을 사용하여 헝겊을 축일 수 있습니다.

### 클리닝 패드 관리

세척 관리 지침 - 섬유 유연제 없이 사용 - 다시 사용하기 전에 충분히 말리십시오.

주의! 클리닝 패드 라벨에 인쇄되어 있는 클리닝 지침 사항을 따르십시오.

### 환경 보호



분리 수거. 이 기호가 표시된 제품과 배터리를 일반 가정용 쓰레기와 함께 처리하면 안 됩니다.

Black & Decker 제품을 교체해야 하거나 더 이상 쓸모가 없어졌다고 판단되면 본 제품을 가정용 쓰레기로 처리하지 마십시오. 이 제품은 분리 수거하십시오.



사용하던 제품과 포장을 분리 수거하면 자원을 재활용 및 재사용할 수 있습니다. 재활용 자원을 이용하면 환경 오염이 방지되고 고철 자원에 대한 수요를 줄일 수 있습니다.

지역에 따라 가정용 가전제품을 분리 수거하는 규정이 마련되어있거나 새로운 제품을 구입할 때 판매점에서 폐기 방법을 알려줄 수 있습니다.

Black & Decker는 사용이 끝난 Black & Decker 제품을 수집하여 재활용하기 위한 시설을 운영하고 있습니다. 이 서비스를 활용하려면 당사가 폐제품 수거를 위임한 공인 수리 대리점에 제품을 반환해 주십시오.

### 서비스 안내

블랙앤데커 청소기제품은 공식 인증된 서비스센터를 통해서 보증 서비스를 받으실 수 있습니다. 자세한 공식 서비스센터 안내 및 보증 서비스 안내는 블랙앤데커 홈페이지나 고객센터 1577-0933에서 확인하실 수 있습니다.

### 참고

- ◆ BLACK+DECKER는 제품을 지속적으로 개선시키기 때문에 사전 통지 없이 제품 사양이 변경될 수 있습니다.
- ◆ 기본 장비 및 액세서리 구성은 각 국가에 따라 다를 수 있습니다.
- ◆ 제품 사양은 국가에 따라 다를 수 있습니다.
- ◆ 국가에 따라 판매하지 않는 제품도 있을 수 있습니다. 제품 판매 여부는 해당 지역에 있는 BLACK+DECKER 판매점으로 문의하십시오.